

EN

# SUUNTO D6

USER'S GUIDE

  
**SUUNTO**  
REPLACING LUCK.

## **CUSTOMER SERVICE CONTACTS**

<b>Suunto Oy</b>	<b>Phone +358 9 875870</b>
	<b>Fax +358 9 87587301</b>
<b>Suunto USA</b>	<b>Phone 1 (800) 543-9124</b>
<b>Canada</b>	<b>Phone 1 (800) 776-7770</b>
<b>Europe</b>	<b>Phone +358 2 284 11 60</b>
<b>Suunto website</b>	<b><u><a href="http://www.suunto.com">www.suunto.com</a></u></b>

1. WELCOME TO THE WORLD OF SUUNTO DIVING INSTRUMENTS .....	7
2. WARNINGS, CAUTIONS, AND NOTES .....	9
3. SUUNTO D6 AT A GLANCE .....	15
3.1. Navigating in the menus .....	16
3.2. Button symbols and functions .....	17
4. GETTING STARTED WITH YOUR SUUNTO D6 .....	19
4.1. TIME mode settings .....	19
4.1.1. Setting the alarm .....	20
4.1.2. Setting the time .....	21
4.1.3. Setting the dual time .....	21
4.1.4. Setting the date .....	22
4.1.5. Setting the units .....	22
4.1.6. Setting the backlight .....	23
4.1.7. Setting the tones .....	23
4.2. Stopwatch .....	24
4.3. AC water contacts .....	25
4.4. Learning how to use your compass .....	26
4.4.1. Compass display .....	27
4.4.2. Locking a bearing .....	28
4.4.3. Compass settings .....	29
5. BEFORE DIVING .....	32
5.1. The Suunto RGBM/Deep Stop Algorithm .....	33
5.2. Emergency ascents .....	33
5.3. Dive computer limitations .....	34

5.4. Nitrox .....	34
5.5. Freediving .....	34
5.6. Audible and visual alarms .....	35
5.7. Error conditions .....	39
5.8. DIVE mode settings .....	40
5.8.1. Setting the depth alarm .....	41
5.8.2. Setting the dive-time alarm .....	42
5.8.3. Setting the nitrox values .....	42
5.8.4. Setting the personal/altitude adjustments .....	44
5.8.5. Setting the sample rate .....	44
5.8.6. Setting the Safety Stops/Deep Stops .....	45
5.8.7. Setting the RGBM values .....	45
5.9. Activation and pre-checks .....	46
5.9.1. Accessing DIVE mode .....	46
5.9.2. DIVE mode activation .....	46
5.9.3. Battery power indication .....	48
5.9.4. Diving at altitude .....	49
5.9.5. Personal adjustments .....	50
5.10. Safety Stops .....	52
5.10.1. Recommended Safety Stops .....	52
5.10.2. Mandatory Safety Stops .....	53
5.11. Deep stops .....	55
6. DIVING .....	56
6.1. Diving in AIR mode (DIVEair) .....	56

6.1.1. Basic dive data .....	56
6.1.2. Bookmark .....	58
6.1.3. Ascent rate indicator .....	59
6.1.4. Safety Stops and Deep Stops .....	60
6.1.5. Decompression dives .....	60
6.2. Diving in NITROX mode (DIVEean) .....	65
6.2.1. Before diving in NITROX mode .....	66
6.2.2. Oxygen displays .....	67
6.2.3. Oxygen limit fraction (OLF) .....	69
6.2.4. Gas change and multiple breathing gas mixes .....	69
6.3. Diving in GAUGE mode (DIVEgauge) .....	70
7. AFTER DIVING .....	72
7.1. At the surface .....	72
7.1.1. Surface interval .....	72
7.1.2. Dive numbering .....	73
7.1.3. Repetitive dive planning .....	74
7.1.4. Flying after diving .....	74
7.1.5. MEMORY mode .....	75
7.1.6. Suunto Dive Manager (SDM) .....	80
7.1.7. SuuntoSports.com .....	81
8. CARE AND MAINTENANCE .....	83
8.1. Water contacts and buttons .....	83
8.2. Care of your dive computer .....	83
8.3. Maintenance .....	84

8.4. Water resistance inspection .....	85
8.5. Battery replacement .....	86
9. TECHNICAL DATA .....	87
9.1. Technical specifications .....	87
9.2. RGBM .....	90
9.2.1. Suunto RGBM adaptive decompression .....	91
9.2.2. No-decompression limits .....	92
9.2.3. Altitude diving .....	94
9.3. Oxygen exposure .....	95
10. INTELLECTUAL PROPERTY .....	96
10.1. Copyright .....	96
10.2. Trademark .....	96
10.3. Patent notice .....	96
11. DISCLAIMERS .....	97
11.1. User's responsibility .....	97
11.2. Limits of liability and ISO 9001 compliance .....	97
11.3. After sales service .....	98
12. WARRANTY .....	99
13. DISPOSAL OF THE DEVICE .....	101
GLOSSARY .....	102

# 1. WELCOME TO THE WORLD OF SUUNTO DIVING INSTRUMENTS

Suunto D6 was designed to help you get the most out of your diving. After reading this manual and becoming familiar with the functions of your dive computer, you'll be ready to take the plunge into a whole new world of diving.



With integrated digital compass and gas switching, Suunto D6 simplifies your diving experience because all the information you need relating to depth, time, decompression status, and direction is available on one easy-to-read screen – not hanging off you in a tangle of different gauges.

To get the most out of your Suunto D6, please read this instruction manual carefully and make sure you understand the use, displays, and limitations of the instrument before using it. To make life easier, we've included a glossary of dive-specific terminology at the back of the manual.



## 2. WARNINGS, CAUTIONS, AND NOTES

Throughout this manual, important safety icons are displayed. Three classifications are used to separate these icons by their order of importance:

**WARNING** *is used in connection with a procedure or situation that could result in serious injury or death*

**CAUTION** *is used in connection with a procedure or situation that could result in damage to the device*

**NOTE** *is used to emphasize important information*

Before you go on to read the manual itself, it is extremely important that you read the following warnings. These warnings are intended to maximize your safety while using Suunto D6 and must not be ignored.

**WARNING** *READ THIS MANUAL! Carefully read this manual in its entirety, paying close attention to all the warnings listed below, including Section 5. BEFORE DIVING. Make sure that you fully understand the use, displays and limitations of the dive computer, because any confusion resulting from neglecting to follow this user's manual or from improper use of this device could cause you to commit errors that may lead to serious injury or death.*

**WARNING**

*NOT FOR PROFESSIONAL USE! Suunto dive computers are intended for recreational use only. The demands of commercial or professional diving may expose the diver to depths and conditions that tend to increase the risk of decompression illness (DCI). Therefore, Suunto strongly recommends that the device is not used for any commercial or professional diving activities.*

**WARNING**

*ONLY DIVERS TRAINED IN THE PROPER USE OF SCUBA DIVING EQUIPMENT SHOULD USE A DIVE COMPUTER! No dive computer can replace the need for proper dive training. Insufficient or improper training may cause you to commit errors that may lead to serious injury or death.*

**WARNING**

*THERE IS ALWAYS A RISK OF DECOMPRESSION ILLNESS (DCI) FOR ANY DIVE PROFILE, EVEN IF YOU FOLLOW THE DIVE PLAN PRESCRIBED BY DIVE TABLES OR A DIVE COMPUTER. NO PROCEDURE, DIVE COMPUTER, OR DIVE TABLE CAN PREVENT THE POSSIBILITY OF DCI OR OXYGEN TOXICITY! An individual's physiological make-up can vary from day to day. The dive computer cannot account for these variations. You are strongly advised to remain well within the exposure limits provided by the instrument to minimize the risk of DCI. As an added precaution, you should consult a physician regarding your fitness before diving.*

- WARNING** *SUUNTO STRONGLY RECOMMENDS THAT SPORT DIVERS LIMIT THEIR MAXIMUM DEPTH TO 40 M/130 FT OR TO THE DEPTH CALCULATED BY THE COMPUTER BASED ON THE SELECTED O<sub>2</sub>% AND A MAXIMUM PO<sub>2</sub> OF 1.4 BAR!*
- WARNING** *DIVES THAT REQUIRE DECOMPRESSION STOPS ARE NOT RECOMMENDED. YOU SHOULD ASCEND AND BEGIN DECOMPRESSION IMMEDIATELY WHEN THE DIVE COMPUTER SHOWS YOU THAT A DECOMPRESSION STOP IS REQUIRED! Note the blinking ASC TIME symbol and the upward pointing arrow.*
- WARNING** *USE BACK-UP INSTRUMENTS! Make sure that you use back-up instrumentation, including a depth gauge, submersible pressure gauge, timer or watch, and have access to decompression tables whenever diving with the dive computer.*
- WARNING** *PERFORM PRE-CHECKS! Always activate and check the device before diving in order to ensure that all Liquid Crystal Display (LCD) segments are completely displayed, that the device has not run out of battery power, and that the oxygen, altitude, personal, Safety/Deep Stop, and RGBM adjustments are correct.*

**WARNING**

*YOU ARE ADVISED TO AVOID FLYING ANY TIME THE COMPUTER COUNTS DOWN THE NO-FLY TIME. ALWAYS ACTIVATE THE COMPUTER TO CHECK THE REMAINING NO-FLY TIME PRIOR TO FLYING! Flying or traveling to a higher altitude within the no-fly time can greatly increase the risk of DCI. Review the recommendations given by Diver's Alert Network (DAN) in Section 7.1.4. Flying after diving.*

**WARNING**

*THE DIVE COMPUTER SHOULD NEVER BE TRADED OR SHARED BETWEEN USERS WHILE IT IS IN OPERATION! Its information will not apply to someone who has not been wearing it throughout a dive, or sequence of repetitive dives. Its dive profiles must match that of the user. If it is left on the surface during any dive, the dive computer will give inaccurate information for subsequent dives. No dive computer can take into account dives made without the computer. Thus, any diving activity up to four days prior to initial use of the computer may cause misleading information and must be avoided.*

**WARNING**

*DO NOT DIVE WITH A CYLINDER OF ENRICHED AIR IF YOU HAVE NOT PERSONALLY VERIFIED ITS CONTENTS AND ENTERED THE ANALYZED VALUE INTO YOUR DIVE COMPUTER! Failure to verify cylinder contents and enter the appropriate O<sub>2</sub>% into your dive computer will result in incorrect dive planning information.*

**WARNING**

*THE DIVE COMPUTER WILL NOT ACCEPT FRACTIONAL PERCENTAGE VALUES OF OXYGEN CONCENTRATION. DO NOT ROUND UP FRACTIONAL PERCENTAGES! For example, 31.8% oxygen should be entered as 31%. Rounding up will cause nitrogen percentages to be understated and will affect decompression calculations. If you want to adjust the computer to provide more conservative calculations, use the personal adjustment feature to affect decompression calculations, or reduce the PO<sub>2</sub> setting to affect oxygen exposure.*

**WARNING**

*SELECT THE CORRECT ALTITUDE ADJUSTMENT SETTING! When diving at altitudes greater than 300 m/1,000 ft the Altitude Adjustment feature must be correctly selected in order for the computer to calculate the decompression status. The dive computer is not intended for use at altitudes greater than 3,000 m/10,000 ft. Failure to select the correct Altitude Adjustment setting, or diving above the maximum altitude limit will result in erroneous dive and planning data.*

**WARNING**

*SELECT THE CORRECT PERSONAL ADJUSTMENT SETTING! Whenever it is believed that factors that tend to increase the possibility of DCI exist, it is recommended that you use this option to make the calculations more conservative. Failure to select the correct Personal Adjustment setting will result in erroneous dive and planning data.*

**WARNING**


*This device contains a Lithium cell battery. To reduce the risk of fire or burns, do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water. Replace only with manufacturer-specified batteries. Recycle or dispose of used batteries properly.*

**NOTE**

*It is not possible to change between AIR, NITROX and GAUGE modes before the instrument has counted down the no-fly time. There is one exception to this: You can change from AIR to NITROX mode even during the no-fly time. When planning both air and nitrox dives during the same dive series, you should set the instrument in NITROX mode and modify the gas mix accordingly.*

*In GAUGE mode, the no-fly time is always 48 hours.*

### 3. SUUNTO D6 AT A GLANCE

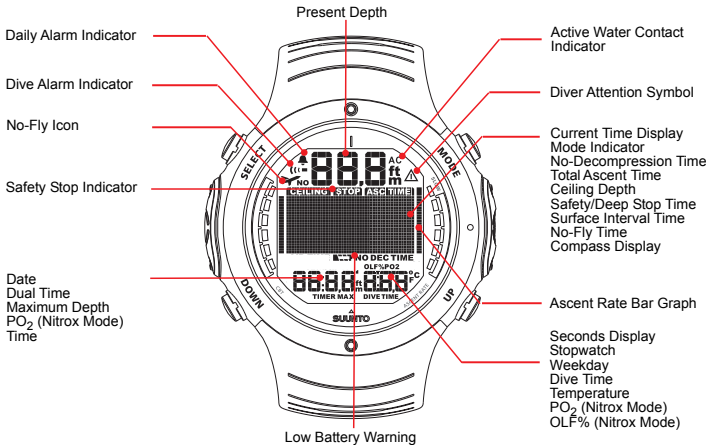


#### NOTE

*If no button is pressed for 5 minutes, the dive computer beeps and returns to the TIME mode automatically.*

### 3.1. Navigating in the menus

Suunto D6 has three main operating modes - TIME mode (TIME), DIVE mode (DIVE), and MEMORY mode (MEM) – as well as the COMPASS submode, which can be activated from either TIME or DIVE modes. To toggle between the main modes, press the MODE button. To select a submode in DIVE and MEM mode, press the UP/DOWN buttons.

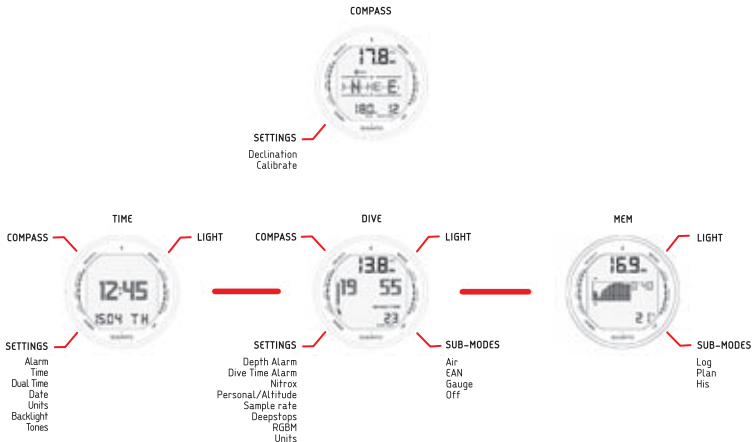











### 3.2. Button symbols and functions

The table below explains the main functions of the dive computer's buttons. The buttons and their use will be explained in more detail in the relevant sections of the manual.

Table 3.1. Button symbols and functions

Symbol	Button	Press	Main functions
	MODE	Short	Switch between main modes Switch from submode to main mode Activate backlight in DIVE mode
	MODE	Long	Activate backlight in other modes
	SELECT	Short	Select a submode Select and accept settings
	SELECT	Long	Activate compass in TIME and DIVE modes

Symbol	Button	Press	Main functions
	UP	Short	Toggle between alternative displays Change submode Increase values
	UP	Long	Enable gas switching in NITROX mode
	DOWN	Short	Toggle between alternative displays Change submode Decrease values
	DOWN	Long	Enter Setting mode

## 4. GETTING STARTED WITH YOUR SUUNTO D6

To get the most out of your Suunto D6, take some time to personalize it and really make it YOUR computer. Set the correct time and date, as well as the alarms and tones, unit and backlight settings, **then calibrate and test the compass function.**

Suunto D6 is a very user-friendly dive computer, and you will quickly become familiar with its functions. Make absolutely sure that you know your computer and have it set up as you want it BEFORE getting into the water.

### 4.1. TIME mode settings

The first thing you'll want to do with your Suunto D6, is to set the TIME mode shortcuts: alarm, time, dual time, date, units, backlight, and tones. In this section, we look at how to do this.

Before that, however, take a look at the figure below, which shows how to toggle between different shortcuts in the TIME mode.




#### NOTE

*The seconds display reverts to date display after 5 minutes in order to save battery power.*

## NOTE

*The display is illuminated by holding down the MODE button for more than 2 seconds.*


Now that you know how to toggle between the shortcuts, you can start to set them. The following figure shows how to enter the TIME SETTINGS menu.

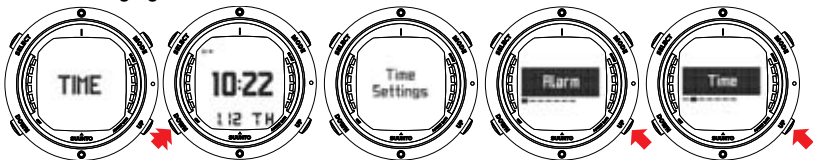

USE UP AND DOWN BUTTONS  
TO TOGGLE BETWEEN ALARM,  
TIME,  
DUAL TIME, DATE, UNITS,  
BACKLIGHT  
AND TONES.


### 4.1.1. Setting the alarm

The dive computer has a daily alarm function. When the daily alarm activates, the screen blinks and the alarm sounds for 24 seconds. Press any button to stop the alarm.

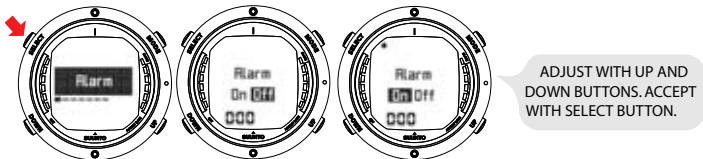

#### 4.1.2. Setting the time

In the TIME SETTING mode, you are able to set the hour, minute, and second, as well as choose between 12 and 24 hour display.

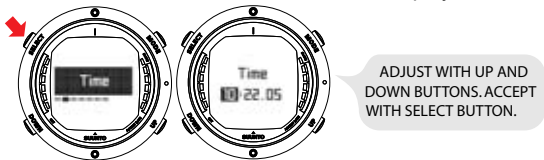

#### 4.1.3. Setting the dual time

In the DUAL TIME SETTING mode you can select the hour and minute of a dual time - useful when traveling to a different time zone.



ADJUST WITH UP AND DOWN BUTTONS. ACCEPT WITH SELECT BUTTON.

#### 4.1.4. Setting the date


Use the DATE SETTING mode to set the year, month, and day. The day of the week is automatically calculated in accordance with the date.



ADJUST WITH UP AND DOWN BUTTONS. ACCEPT WITH SELECT BUTTON.

#### 4.1.5. Setting the units


In the UNITS SETTING mode you can choose to have the units displayed in either the metric or imperial system - meters/feet, Celsius/Fahrenheit etc.

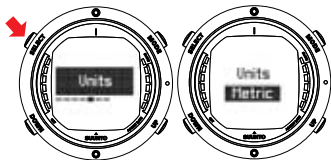

ADJUST WITH UP AND  
DOWN BUTTONS. ACCEPT  
WITH SELECT BUTTON.

#### 4.1.6. Setting the backlight


Use the BACKLIGHT SETTING mode to turn the backlight on or off and to define how long it stays on for (5, 10, 20, 30, or 60 seconds). When the backlight is turned off, it does not illuminate when an alarm sounds.

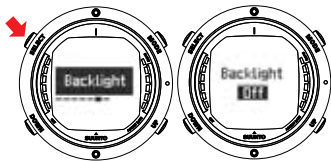

ADJUST WITH UP AND  
DOWN BUTTONS. ACCEPT  
WITH SELECT BUTTON.

#### 4.1.7. Setting the tones

The TONE SETTING mode allows you to activate or deactivate the tones.

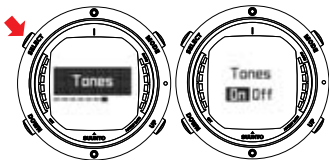

ADJUST WITH UP AND DOWN BUTTONS. ACCEPT WITH SELECT BUTTON.

## 4.2. Stopwatch

The Suunto D6's stopwatch measures elapsed and split times. A separate stopwatch (dive timer) can also be used when in GAUGE mode. See *Section 6.3. Diving in GAUGE mode (DIVEgauge)*.




USE DOWN BUTTON TO START STOPWATCH AND TAKE A SPLIT TIME. THE UP BUTTON STOPS THE STOPWATCH AND LONG PRESSING IT RESETS IT.



### 4.3. AC water contacts

The water and data transfer contact is located on the right side of the case. When submerged, the water contact is connected to the casing (which is the other pole of the water contact) by the conductivity of the water and the “AC” symbol appears on the display. The AC text is shown until the water contact deactivates.

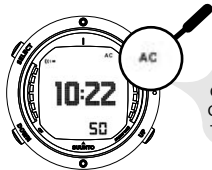

AC APPEARS IN THE TOP RIGHT CORNER OF THE DISPLAY, WHEN THE DIVE COMPUTER IS IN CONTACT WITH WATER. THIS ALSO ACTIVATES THE DIVE MODE.

Contamination or dirt on the water contact may prevent this automatic activation. It is therefore important that the water contact is kept clean. The contact can be cleaned with fresh water and a soft brush, for example a tooth brush.




## NOTE

*Water or moisture build-up around the water contact may cause the contact to activate automatically. This can happen, for example, when washing your hands or sweating. If the water contact activates in the TIME mode, the AC symbol will appear on the display, and will be shown until the water contact deactivates. To save battery power, you should deactivate the water contact by cleaning it and/or drying it with a soft towel.*

## 4.4. Learning how to use your compass

Suunto D6 integrates a digital compass, which can be used both while diving and on dry land, and can be accessed from either the DIVE mode or TIME mode.

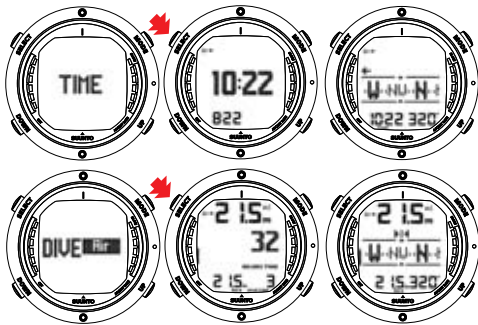

IF ACCESSED FROM TIME MODE, TIME AND BEARING ARE DISPLAYED AT THE BOTTOM OF THE SCREEN.

IF ACCESSED FROM DIVE MODE, CURRENT DEPTH AND TIME OR MAXIMUM DEPTH, AS WELL AS BEARING OR DIVE TIME OR TEMPERATURE ARE DISPLAYED.

#### **NOTE**

*When accessed from DIVE mode, toggle between the alternative displays by pressing the UP/DOWN buttons.*

#### **NOTE**

*In order to save battery power, the compass display will automatically return to the TIME or DIVE mode 60 seconds after the last button-press.*

#### **4.4.1. Compass display**

The Suunto D6 displays the compass as a graphical representation of a compass rose. The rose displays the cardinal and half cardinal points, in addition to which, the current bearing is also displayed numerically.




#### 4.4.2. Locking a bearing


A bearing can be locked to help you follow a selected course, and directional arrows point towards the locked bearing. Locked bearings are stored in the memory for later analysis and are available the next time the compass is activated.



The Suunto D6 also provides help for navigating square and triangular patterns, as well as navigating a return heading. This is made possible by following graphical symbols in the center of the compass display:


Table 4.1. Locked bearing symbols

Symbol	Explanation
	You are traveling towards the locked bearing
	You are 90 (or 270) degrees from the locked bearing
	You are 180 degrees from the locked bearing

Symbol	Explanation
	You are 120 (or 240) degrees from the locked bearing


#### 4.4.3. Compass settings

You can define the compass settings (declination and calibration) when in COMPASS mode:

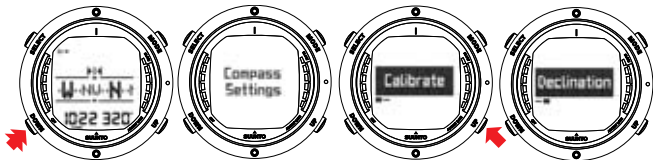

#### Declination

You can compensate for the difference between true north and magnetic north by adjusting the compass declination. The declination can be found, for example, from sea charts or topographic maps of the local area.

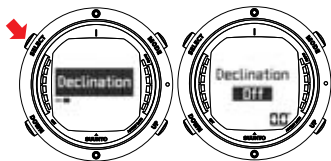

ADJUST WITH UP  
AND DOWN. ACCEPT  
WITH SELECT.

## Calibration


Because of changes in the surrounding magnetic field, the Suunto D6 electronic compass occasionally needs to be re-calibrated. During the calibration process, the compass adjusts itself to the surrounding magnetic field. As a basic rule, you should calibrate the compass whenever it doesn't seem to operate properly, or after replacing the dive computer's battery.

Strong electromagnetic fields, such as powerlines, stereo speakers, and magnets can affect the compass calibration. It is therefore advisable to calibrate the compass if your Suunto D6 has been exposed to these fields.

**NOTE** *When traveling overseas, it is recommended that you recalibrate the compass at the new location before using it.*

**NOTE** *Remember to hold the Suunto D6 level during the calibration process.*

To calibrate the compass:

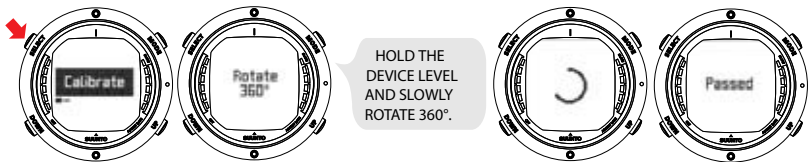

If the calibration fails several times in a row, it is possible that you are in an area with sources of magnetism, such as large metal objects, powerlines or electric appliances. Move to another location and try to calibrate the compass again. If the calibration continues to fail, contact an authorized Suunto service center.

## 5. BEFORE DIVING

Do not attempt to use the dive computer without reading this user's manual in its entirety, including all the warnings. Make sure that you fully understand the use, displays, and limitations of the instrument. If you have any questions about the manual or the Suunto D6, please contact your Suunto representative before diving with the dive computer.

Always remember that **YOU ARE RESPONSIBLE FOR YOUR OWN SAFETY!**

When used properly, Suunto D6 is an outstanding tool for assisting properly trained, certified divers in planning and executing sport dives. It is **NOT A SUBSTITUTE FOR CERTIFIED SCUBA INSTRUCTION**, including training in the principles of decompression.

### **WARNING**

*Diving with enriched air mixtures (nitrox) exposes you to risks that are different from those associated with diving with standard air. These risks are not obvious, and require training to understand and avoid. Risks include possible serious injury or death.*

Do not attempt to dive with any gas mix other than standard air without first receiving certified training in this specialty.



## 5.1. The Suunto RGBM/Deep Stop Algorithm

Suunto's Reduced Gradient Bubble Model (RGBM), utilized in the Suunto D6, predicts both dissolved and free gas in the blood and tissues of divers. It is a significant advance on the classic Haldane models, which do not predict free gas. The advantage of Suunto RGBM is additional safety through its ability to adapt to a variety of situations and dive profiles.

The Suunto D6 allows you to choose between a traditional Recommended Safety Stop and Deep Stops. Deep Stops are safety stops that occur deeper than traditional stops, with the purpose of minimizing microbubble formation.

In order to optimize the response to different increased risk situations, an additional category of stop, referred to as a Mandatory Safety Stop, has been introduced. The combination of stop types depends on the user settings and the specific dive situation.

To get the most from the RGBM safety benefits, refer to *Section 9.2. RGBM*.

## 5.2. Emergency ascents

In the unlikely event that the dive computer malfunctions during a dive, follow the emergency procedures provided by your certified dive training agency or, alternatively, follow these steps:

1. Assess the situation calmly and then move promptly to less than 18 m/60 ft.
2. At 18 m/60 ft, slow down your ascent rate to 10 m/33 ft per minute and move to a depth between 3 and 6 m/10 and 20 ft.
3. Stay there for as long as your air supply will safely allow. After reaching the surface, do not dive for at least 24 hours.

### **5.3. Dive computer limitations**

While the dive computer's calculations are based on current decompression research and technology, it is important to realize that the computer cannot monitor the actual physiological functions of an individual diver. All decompression schedules currently known to the authors, including the U.S. Navy Tables, are based on theoretical mathematical models, which are intended to serve as a guide to reduce the probability of decompression illness.

### **5.4. Nitrox**

Diving with nitrox provides you with an opportunity to increase bottom times or reduce the risk of decompression illness by reducing the nitrogen content in the gas mix.

However, when the gas mix is altered, the oxygen content of the mix is generally increased. This increase exposes the diver to an oxygen toxicity risk not usually considered in recreational diving. In order to manage this risk, the dive computer tracks the time and intensity of the oxygen exposure and provides the diver with information to adjust the dive plan in order to maintain oxygen exposure within reasonably safe limits.

In addition to the physiological effects of enriched air on the body, there are operational considerations to be addressed when handling altered breathing mixes. Elevated concentrations of oxygen present a fire or explosion hazard. Consult the manufacturer of your equipment to check its compatibility with nitrox.

### **5.5. Freediving**

Freediving, and particularly freediving in combination with scuba diving, may present risks that have not been researched and are not commonly known.

Anyone who engages in any form of breathhold diving is in danger of shallow-water blackout (SWB), that is, the sudden loss of consciousness caused by oxygen starvation. Any breathhold diving results in some nitrogen build-up in the blood and other fast tissues. Due to the short time spent at depth, this build-up is generally not significant. Therefore, provided the effort involved in freediving has not been severe, there is little risk in diving after breathhold diving. However, the reverse is more unknown and may significantly increase the risk of DCI. Therefore, **FREEDIVING AFTER SCUBA DIVING IS NOT RECOMMENDED**. You should avoid freediving, and not exceed 5 m/16 ft, for at least two hours after scuba diving.

**WARNING**

*Suunto also recommends that you receive training in freediving techniques and physiology before conducting breathhold dives. No dive computer can replace the need for proper dive training. Insufficient or improper training may cause a diver to commit errors that may lead to serious injury or death.*

**5.6. Audible and visual alarms**

The dive computer features audible and visual alarms that advise when important limits are approached or that prompt you to acknowledge preset alarms. The table below describes the different alarms and their meanings.

Table 5.1. Audible and visual alarm types

<b>Alarm type</b>	<b>Alarm reason</b>
Short single beep	Dive computer is activated. Dive computer automatically returns to the TIME mode.
Three beeps with a three second interval and activated backlight	No-decompression dive turns into a Decompression Stop dive. An arrow pointing upwards and the blinking ascent warning ASC TIME will appear.
Continuous beeps and activated backlight	Maximum allowed ascent rate, 10 m per min/33 ft per min, is exceeded. Ascent rate bar graph blinks and STOP warning appears. Decompression ceiling depth is exceeded. An Error warning (Er) and a downward pointing arrow appear. You should immediately descend to, or below, the ceiling. The instrument will otherwise enter a permanent Error mode within three minutes, indicated by a permanent Er symbol.

You are able to preset alarms before the dive. The programmable alarms can be set for maximum depth, dive time and time. See also *Section 5.8. DIVE mode settings* and *Section 4.1. TIME mode settings*.

Table 5.2. Preset alarm types

<b>Alarm type</b>	<b>Alarm reason</b>
Continuous beep series for 24 seconds Maximum depth blinks as long as the current depth value exceeds the preset value.	Preset maximum depth is reached.
Continuous beep series for 24 seconds or until any button is pressed. Dive time blinks for one minute.	Preset dive time is reached.
Current time is shown Continuous beep series for 24 seconds or until any button is pressed. Current time blinks for one minute	Preset alarm time is reached.

Table 5.3. Oxygen alarms in NITROX mode

Alarm type	Alarm reason
Continuous beeps for 3 minutes and activated backlight	<p>Set oxygen partial pressure limit is exceeded. The alternative display is replaced with a current blinking PO<sub>2</sub> value. You should immediately ascend above the PO<sub>2</sub> depth limit.</p> <p>OLF value reaches 80%. The OLF value will start to blink.</p> <p>OLF value reaches 100%. The OLF value will blink.</p>

**NOTE**

*When the backlight is turned OFF, it does not illuminate when an alarm is activated.*

**WARNING**

*WHEN THE OXYGEN LIMIT FRACTION INDICATES THAT THE MAXIMUM LIMIT IS REACHED, YOU MUST IMMEDIATELY ASCEND UNTIL THE OLF VALUE STOPS BLINKING. Failure to take action to reduce oxygen exposure after the warning is given can rapidly increase the risk of oxygen toxicity, injury, or death.*

## **5.7. Error conditions**

The dive computer has warning indicators that alert you to react to certain situations that would significantly increase the risk of DCI. If you do not respond to its warnings, the dive computer will enter an Error mode, indicating that the risk of DCI has greatly increased. If you understand the dive computer and operate it sensibly, it is very unlikely you will ever put the instrument into the Error mode.

### **Omitted decompression**

The Error mode results from omitted decompression, i.e. when you stay above the ceiling for more than three minutes. During this three-minute period the Er warning is shown and the audible alarm beeps. After this, the dive computer will enter a permanent Error mode. The instrument will continue to function normally if you descend below the ceiling within this three-minute period.

Once in the permanent Error mode, only the Er warning is shown in the center window. The dive computer will not show times for ascent or stops. However, all the other displays will function as before to provide information for ascent. You should immediately ascend to a depth of 3 to 6 m/10 to 20 ft and remain at this depth until air supply limitations require you to surface.

After surfacing, you should not dive for a minimum of 48 hours. During the permanent Error mode, the Er text will be displayed in the center window and the planning mode will be disabled.

## 5.8. DIVE mode settings


Suunto D6 has several user-definable functions, as well as depth and time-related alarms that you can set according to your personal preferences. The DIVE mode settings are dependent on the dive sub-mode chosen (AIR, EAN, GAUGE), so that, for example, nitrox settings are only available in the DIVEean sub-mode. The table below shows what dive settings are available in each DIVE submode.

Table 5.4. DIVE mode settings

<b>Setting</b>	<b>AIR mode</b>	<b>NITROX mode</b>	<b>GAUGE mode</b>
Depth alarm	X	X	X
Dive-time alarm	X	X	X
Nitrox		X	
Personal/Altitude	X	X	
Sample rate	X	X	X
Safety/Deep stop	X	X	
RGBM	X	X	
Units	X	X	X

The following figure shows how to enter the DIVE mode settings menu.



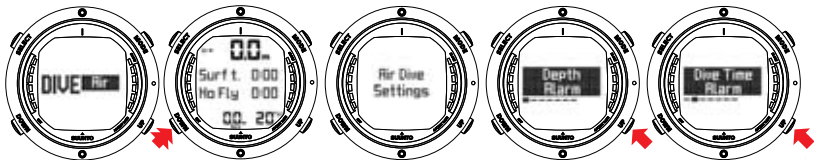


USE UP AND  
DOWN BUTTONS TO  
TOGGLE BETWEEN  
DIVE SETTINGS.

## NOTE

*The settings cannot be activated until 5 minutes has elapsed after the dive.*

### 5.8.1. Setting the depth alarm

You can set a depth alarm in the dive computer.

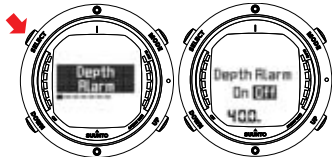

ADJUST WITH UP AND  
DOWN BUTTONS. ACCEPT  
WITH SELECT BUTTON.

The depth alarm is factory-set to 40 m/131 ft, but you can adjust it according to your personal preference, or switch it off altogether. The depth range can be set from 3m to 100 m/9 ft to 328 ft.

### 5.8.2. Setting the dive-time alarm

The Suunto D6 has a dive-time alarm setting which, when activated, can be used for several purposes to add to your diving safety.



#### NOTE


*With a range of 1 - 99 minutes, the alarm can be set to your planned bottom time, for example.*

### 5.8.3. Setting the nitrox values

If set to the NITROX mode, the correct oxygen percentage of the gas in your cylinder (and additional gases) must always be entered into the computer to ensure correct nitrogen and oxygen calculations. In addition, the oxygen partial pressure limit must be set. When in the Nitrox setting mode, the equivalent allowed maximum depth, based on the chosen setting, will also be displayed. Settings for an additional mix (MIX2) are made similarly, but with the additional selection of "ON" or "OFF".

In order to minimize the risk of error during a dive, it is highly recommended that the mixes are set in the proper order. This means that as the mix number rises, so does oxygen content, and this is the order they are usually used during the dive. Before a dive, only set to “ON” the mixes you actually have available and remember to check the set values to make sure they are correct.

The default oxygen percentage ( $O_2\%$ ) setting is 21% (air) and oxygen partial pressure ( $PO_2$ ) setting 1.4 bar. After entering values for MIX1, you can enable/disable and set an additional gas mix - MIX2.

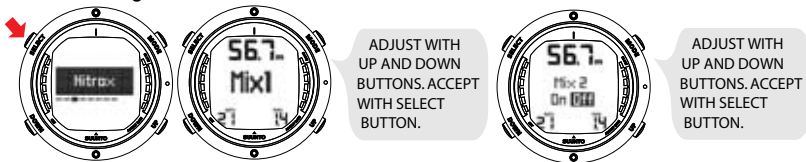


## NOTE

*If only MIX1 is enabled (MIX2 set OFF), MIX1 will revert to default settings (21%  $O_2$  and  $PO_2$  1.4 bar) after approximately 2 hours. If MIX2 is set ON, settings for all mixes are stored until changed. If either MIX2 or MIX3 have an oxygen content of 22% or greater, settings for all mixes are stored until changed.*

#### 5.8.4. Setting the personal/altitude adjustments

The current Altitude and Personal Adjustment settings are displayed in the startup screen when entering the DIVE mode. If the mode does not match the altitude or personal conditions (see *Section 5.9.4. Diving at altitude* and *Section 5.9.5. Personal adjustments*), it is imperative that you enter the correct selection before diving. Use Altitude Adjustment to select the correct altitude and use Personal Adjustment to add an extra level of conservatism.

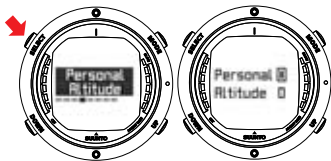

ADJUST WITH UP AND DOWN BUTTONS. ACCEPT WITH SELECT BUTTON.

#### 5.8.5. Setting the sample rate


The sample rate controls how often the depth, time, and water temperature is stored in the memory. You can set the dive profile sample rate to 1, 10, 20, 30, or 60 seconds. The factory default setting is 20 seconds.



ADJUST WITH UP AND DOWN BUTTONS. ACCEPT WITH SELECT BUTTON.


### 5.8.6. Setting the Safety Stops/Deep Stops

The Deep Stop setting allows you to choose between traditional Safety Stops or Deep Stops. If Deep Stops are set to OFF, the traditional Safety Stop calculation is used. If set to ON, iterative Deep Stops will be prompted instead. The length of the individual Deep Stops can be set to 1 or 2 minutes.

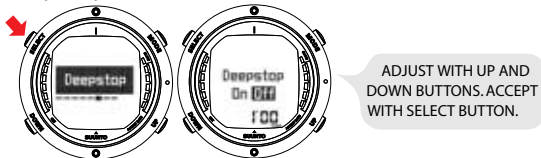

### 5.8.7. Setting the RGBM values

For certain divers and diving conditions, it may be desirable to set the attenuated RGBM mode. The selection is displayed during the DIVE mode startup. The options are full RGBM effects (100%), and attenuated RGBM (50%).

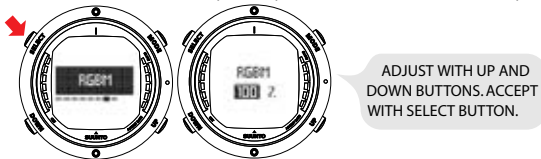


## 5.9. Activation and pre-checks

This section describes how to activate the DIVE mode and explains the pre-checks that it is highly recommended you perform before you get into the water.

### 5.9.1. Accessing DIVE mode


The Suunto D6 has three diving modes: AIR mode for diving with standard air only, NITROX mode for diving with oxygen enriched mixtures, and GAUGE mode for use as a bottom timer and for freediving. The OFF mode disables the DIVE mode, and allows the TIME mode to be used underwater. The chosen dive mode is displayed when the DIVE mode is accessed, and you can toggle between the submodes by pressing the UP/DOWN buttons.

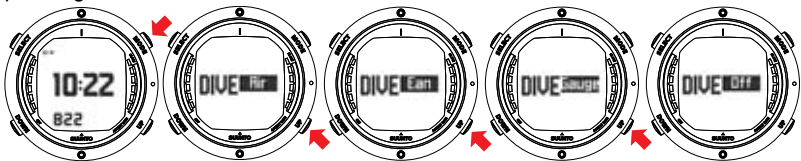

### 5.9.2. DIVE mode activation

The dive computer activates automatically when submerged deeper than 0.5 m/1.5 ft. However, it is necessary to activate the DIVE mode BEFORE diving to check the altitude and personal adjustment settings, battery condition, oxygen settings etc.

After activation, all display elements turn on showing mostly figure 8s and graphical elements, and the backlight and the beep are activated. After this, the selected altitude and personal settings are displayed, as well as the RGBM and Deep Stop status. A few seconds later the battery power indicator is shown.

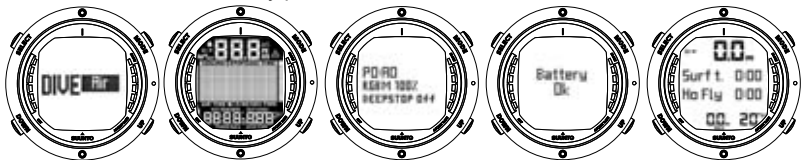

At this time, perform your pre-checks, making sure that:

- the instrument operates in the correct mode and provides a complete display (AIR/NITROX/GAUGE mode)
- the battery level is ok
- the altitude, personal adjustment, Safety/Deep stops, and RGBM settings are correct
- the instrument displays correct units of measurement (Metric/Imperial)
- the instrument displays the correct temperature and depth (0.0 m/0 ft)
- the alarm beeps

And, if set to NITROX mode, make sure that:

- the correct number of mixes is set and that the oxygen percentages are adjusted according to the measured nitrox blends in your cylinders
- the oxygen partial pressure limits are set correctly


For more information on the NITROX mode, refer to *Section 6.2. Diving in NITROX mode (DIVEean)* .

The dive computer is now ready for diving.

### 5.9.3. Battery power indication

Temperature or internal oxidation of the battery affect the battery voltage. If the instrument is stored for a long period, or used in cold temperatures, the low battery warning may be displayed even though the battery has enough capacity. In these cases, re-enter DIVE mode to receive the battery power indication.

After the battery check, the Low Battery Warning is indicated by the battery symbol.

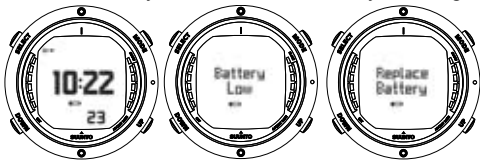

If the battery symbol is displayed in the Surface mode, or if the display is faded or weak, the battery may be too low to operate the dive computer, and battery replacement is recommended.

#### **NOTE**

*For safety reasons, the backlight cannot be activated when the low battery warning is indicated by the battery symbol.*



#### 5.9.4. Diving at altitude

The dive computer can be adjusted both for diving at altitude and also to increase the conservatism of the mathematical nitrogen model.

When programming the instrument for the correct altitude, you need to select the correct Altitude Adjustment settings according to *Table 5.5, Altitude Adjustment settings*. The dive computer will adjust its mathematical model according to the entered altitude setting, giving shorter no-decompression times at higher altitudes (see *Table 9.1, No-decompression time limits for various depths (m)* and *Table 9.2, No-decompression time limits for various depths (ft)* in *Section 9.2. RGBM*).

Table 5.5. Altitude Adjustment settings

<b>Alt. adjustment value</b>	<b>Altitude range</b>
A0	0 - 300 m / 0 - 1000 ft
A1	300 - 1500 m / 1000 - 5000 ft
A2	1500 - 3000 m / 5000 - 10 000 ft

#### **NOTE**

*Section 5.8.4. Setting the personal/altitude adjustments describes how the Altitude value is set.*

#### **WARNING**

*Traveling to a higher elevation can temporarily cause a change in the equilibrium of dissolved nitrogen in the body. It is recommended that you acclimatize to the new altitude by waiting at least three hours before diving.*

### 5.9.5. Personal adjustments

There are personal factors that can affect your susceptibility to DCI, which you can predict in advance, and input into the decompression model. Such factors vary between divers and also for the same diver from one day to another. The three-step Personal Adjustment setting is available if a more conservative dive plan is desired and, for very experienced divers, a two step adjustment for RGBM effect on repetitive dives is available.

The personal factors which tend to increase the possibility of DCI include, but are not limited to:

- cold exposure - water temperature less than 20 °C/68 °F
- below average physical fitness level
- fatigue
- dehydration
- previous history of DCI
- stress
- obesity

This feature is used to adjust the computer to be more conservative, according to personal preference, by entering the suitable Personal Adjustment setting with the help of *Table 5.6, Personal Adjustment settings*. In ideal conditions, retain the default setting, P0. If conditions are more difficult, or any of the factors which tend to increase the possibility of DCI exist, select P1, or even the most conservative P2. The dive computer then adjusts its mathematical model according to the entered Personal Adjustment setting, giving shorter no-decompression times (see *Section 9.2.2. No-decompression limits, Table 9.1, No-decompression time limits for various depths (m)* and *Table 9.2, No-decompression time limits for various depths (ft)* ).

Table 5.6. Personal Adjustment settings

<b>Personal adjustment value</b>	<b>Condition</b>	<b>Desired tables</b>
P0	Ideal conditions	Default
P1	Some risk factors or conditions exist	Progressively more conservative
P2	Several risk factors or conditions exist	

The Suunto D6 also allows experienced divers who are willing to accept a greater level of risk to adjust the RGBM model. The default setting is 100%, which gives full RGBM effect. Suunto strongly advises you to use full RGBM effect. Statistically, very experienced divers have less incidents with DCI. The reason for this is unknown, but it is possible that some level of physiological and/or psychological accommodation can take place when you are very experienced as a diver. Thus, for certain divers and diving conditions, it may be desirable to set attenuated (50%) RGBM mode. See *Table 5.7, RGBM model settings*.

Table 5.7. RGBM model settings

<b>RGBM setting</b>	<b>Desired Tables</b>	<b>Effect</b>
100%	Standard Suunto RGBM model (Default)	Full RGBM effects

<b>RGBM setting</b>	<b>Desired Tables</b>	<b>Effect</b>
50%	Attenuated RGBM model	Smaller RGBM effects, higher risk!

## **5.10. Safety Stops**

Safety Stops are widely considered good diving practice for recreational diving, and are an integral part of most dive tables. The reasons for performing a Safety Stop include: reducing sub-clinical DCI, microbubble reduction, ascent control, and orientation before surfacing.

The Suunto D6 displays two different types of Safety Stops: Recommended Safety Stop and Mandatory Safety Stop.

### **5.10.1. Recommended Safety Stops**

With every dive over 10 meters, there is a three minute countdown for the Recommended Safety Stop, to be taken in the 6 - 3 m/10 ft - 20 ft range. This is shown with the STOP sign and a three-minute countdown in the center window instead of the no-decompression time.



WHEN STOP IS DISPLAYED,  
MAKE A RECOMMENDED SAFETY  
STOP FOR 3 MINUTES.

## NOTE

*The Recommended Safety Stop, as the name implies, is recommended. If it is ignored, there is no penalty applied to the following surface intervals and dives.*

### 5.10.2. Mandatory Safety Stops

When the ascent rate exceeds 10 m/33 ft per minute continuously for more than 5 seconds, the microbubble build-up is predicted to be more than is allowed for in the decompression model. The Suunto RGBM calculation model responds to this by adding a Mandatory Safety Stop to the dive. The time of this Mandatory Safety Stop depends on the severity of the ascent rate excess.

The STOP sign appears in the display and when you reach the depth zone between 6 m and 3 m/20 ft and 10 ft, the CEILING label, ceiling depth, and the calculated Safety Stop time also appear in the display. You should wait until the Mandatory Safety Stop warning disappears. The total length of the Mandatory Safety Stop time depends on the seriousness of the ascent rate violation.



WHEN CEILING AND STOP ARE DISPLAYED, MAKE A ONE MINUTE MANDATORY SAFETY STOP IN THE DEPTH ZONE BETWEEN 6 M AND 3 M.

You must not ascend shallower than 3 m/10 ft with the Mandatory Safety Stop warning on. If you ascend above the Mandatory Safety Stop ceiling, a downward pointing arrow will appear and a continuous beeping starts. You should immediately descend to, or below, the Mandatory Safety Stop ceiling depth. If you correct this situation at any time during the dive, there are no effects on the decompression calculations for future dives.



WHEN CEILING AND STOP ARE DISPLAYED, IMMEDIATELY (WITHIN 3 MINUTES) DESCEND TO OR BELOW CEILING.

If you continue to violate the Mandatory Safety Stop, the tissue calculation model is affected and the dive computer shortens the available no-decompression time for your next dive. In this situation, it is recommended that you prolong your surface interval time before your next dive.

## 5.11. Deep stops

The Suunto D6 allows you to choose a Deep Stop algorithm instead of the traditional Recommended Safety Stop. Deep Stops are safety stops that occur deeper than traditional stops, with the purpose of minimizing microbubble formation and excitation.

The Suunto RGBM model calculates deep stops iteratively, placing the first stop about halfway between the maximum depth and the ceiling depth. After the first Deep Stop is completed, another Deep Stop will be prompted halfway to the ceiling, and so on until the ceiling depth is reached.

The Deep Stop length can be set to 1 or 2 minutes.

Enabling the Deep Stops disables the Recommended Safety Stops, but Mandatory Safety Stops due to continuous ascent rate violations, for example, are still prompted.

## 6. DIVING

This section contains instructions on how to operate the dive computer and interpret its displays. You'll find that this dive computer is easy to use and read. Each display shows only the data relevant to that specific diving mode.

### 6.1. Diving in AIR mode (DIVEair)

In this section, we look at how to make the most of the dive computer when diving with standard air. To activate DIVEair mode, please see *Section 5.9.1. Accessing DIVE mode.*



DIVE HAS JUST BEGUN AND AVAILABLE NO-DECOMPRESSION TIME IS OVER 99 MINUTES SO NO VALUE IS DISPLAYED.

#### NOTE

*The dive computer will remain in the Surface mode at depths less than 1.2 m/4 ft. At depths greater than 1.2 m/4 ft the instrument will go into the DIVE mode automatically. However, it is recommended that you activate the DIVE Mode manually in order to perform the necessary dive pre-checks.*

#### 6.1.1. Basic dive data

During a No-decompression dive, the following information is displayed:




- your present depth in meters/feet
- the available no-decompression time in minutes as NO DEC TIME
- the ascent rate presented as a bar graph on the right side
- the Diver Attention Symbol if surface interval should be prolonged (see *Table 7.1, Alarms*)




DIVE DISPLAY - PRESENT DEPTH IS 15 M,  
NO-DECOMPRESSION STOP TIME LIMIT IS 61 MIN.  
MAXIMUM DEPTH DURING THIS DIVE WAS 21.5 M,  
ELAPSED DIVE TIME IS 5 MIN.

Alternative displays, by pressing the UP/DOWN buttons, show:

- the elapsed dive time in minutes, shown as DIVE TIME
- the water temperature in °C/°F
- the maximum depth during this dive in meters/feet, indicated as MAX
- the current time, shown as TIME

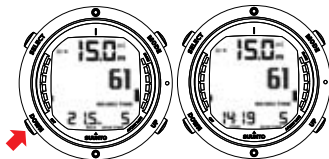


DOWN BUTTON TOGGLES  
BETWEEN MAXIMUM DEPTH  
AND CURRENT TIME.

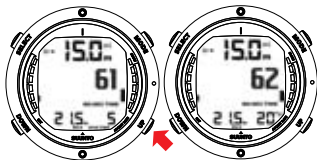

UP BUTTON TOGGLES  
BETWEEN DIVE TIME AND  
WATER TEMPERATURE.

### 6.1.2. Bookmark


It is possible to record bookmarks in the profile memory during a dive. These bookmarks are displayed when scrolling the profile memory on the display. The bookmarks will also be shown as annotations in the downloadable Suunto Dive Manager PC software. The bookmark logs the depth, time, and water temperature, as well as compass heading (if the compass has been enabled). To make a bookmark in the profile memory during a dive, press the SELECT button. A brief confirmation will be given.

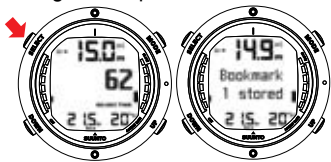

A BOOKMARK IS PLACED  
IN THE PROFILE MEMORY  
DURING A DIVE BY PRESSING  
THE SELECT BUTTON.

### 6.1.3. Ascent rate indicator

The ascent rate is shown graphically along the right side of the display. When the maximum allowed ascent rate is exceeded, the fifth SLOW warning segment and the STOP sign appear and the depth reading starts to blink, indicating that the maximum ascent rate has been exceeded continuously or that the current ascent rate is significantly above the allowed rate.

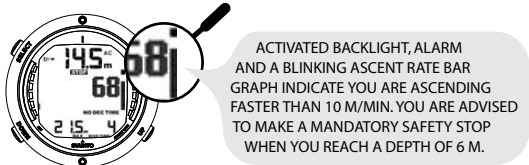

#### WARNING

*DO NOT EXCEED THE MAXIMUM ASCENT RATE! Rapid ascents increase the risk of injury. You should always make the Mandatory and Recommended Safety Stops after you have exceeded the maximum recommended ascent rate. If this Mandatory Safety Stop is not completed, the decompression model will penalize your next dive(s). Continuous ascent rate violations will result in Mandatory Safety Stops. When Recommended Deep Stop is enabled, the length is indicated in seconds.*

#### 6.1.4. Safety Stops and Deep Stops

If Deep Stops are not used, a 3 minute Recommended Safety Stop is prompted after every dive to over 10m.



YOU ARE ADVISED TO MAKE A DEEPSTOP AT 12 M. THE SECOND INDICATOR SHOWS THAT YOU HAVE 58 SECONDS LEFT OF YOUR DEEPSTOP.

#### 6.1.5. Decompression dives

When your NO DEC TIME becomes zero, your dive becomes a decompression dive so you must perform one or more decompression stops on your way to the surface. The NO DEC TIME on your display will be replaced by an ASC TIME, and a CEILING notation will appear. An upward pointing arrow will also prompt you to start your ascent.

If you exceed the no-decompression limits on a dive, the dive computer will provide the decompression information required for ascent. After this, the instrument will continue to provide subsequent interval and repetitive dive information.

Rather than requiring you to make stops at fixed depths, the dive computer lets you decompress within a range of depths (continuous decompression).

The ascent time (ASC TIME) is the minimum amount of time needed to reach the surface in a decompression dive. It includes:

- the time needed to ascend to the ceiling at an ascent rate of 10 m per minute/33 ft per minute. The ceiling is the shallowest depth to which you should ascend

- the time needed at the ceiling
- the time needed at the Mandatory Safety Stop (if any)
- the time needed to reach the surface after the ceiling and Safety Stops have been completed

## **WARNING**

*YOUR ACTUAL ASCENT TIME MAY BE LONGER THAN DISPLAYED BY THE INSTRUMENT! The ascent time will increase if you:*

- *remain at depth*
- *ascend slower than 10 m/33 ft per minute*
- *make your decompression stop deeper than at the ceiling*

*These factors will also increase the amount of air required to reach the surface.*

## **Ceiling, ceiling zone, floor and decompression range**

When in decompression, it is important that you understand the meaning of ceiling, floor, and decompression range.

- The ceiling is the shallowest depth to which you should ascend when in decompression. At this depth, or below, you must perform all stops
- The ceiling zone is the optimum decompression stop zone. It is the zone between the minimum ceiling and 1.8 m/6 ft below the minimum ceiling
- The floor is the deepest depth at which the decompression stop time will not increase. Decompression will start when you pass this depth during your ascent

- The decompression range is the depth range between the ceiling and floor. Within this range, decompression takes place. However, it is important to remember that the decompression will be very slow at, or close to, the floor



The depth of the ceiling and floor will depend on your dive profile. The ceiling depth will be fairly shallow when you enter the decompression mode, but if you remain at depth, it will move downward and the ascent time will increase. Likewise, the floor and ceiling may change upwards while you are decompressing.

When conditions are rough, it may be difficult to maintain a constant depth near the surface. In such cases, it is more manageable to maintain an additional distance below the ceiling, to make sure that the waves do not lift you above the ceiling. Suunto recommends that decompression takes place deeper than 4 m/13 ft, even if the indicated ceiling is shallower.

**NOTE** *It will take more time and more air to decompress below the ceiling than at the ceiling.*

## WARNING

*NEVER ASCEND ABOVE THE CEILING! You must not ascend above the ceiling during your decompression. In order to avoid doing so by accident, you should stay somewhat below the ceiling.*

### Display below the floor

The blinking ASC TIME and an upward pointing arrow indicate that you are below the floor. You should start your ascent immediately. The ceiling depth is shown on the left side, and the minimum total ascent time on the right side, of the center window. Below is an example of a decompression dive without Deep Stops, below the floor.



UPWARD POINTING ARROW, BLINKING ASC TIME AND AN ALARM TELL YOU TO ASCEND. MINIMUM TOTAL ASCENT TIME INCLUDING SAFETY STOP IS 4 MINUTES. CEILING IS AT 3 M.

### Display above the floor

When you ascend above the floor, the ASC TIME display stops blinking and the upward pointing arrow disappears. Below is an example of a decompression dive above the floor.



UPWARD POINTING ARROW HAS DISAPPEARED AND ASC TIME LABEL HAS STOPPED BLINKING, MEANING YOU ARE IN THE DECOMPRESSION RANGE.

Decompression will now begin, but is very slow. You should therefore continue your ascent.

### Display at the ceiling zone

When you reach the ceiling zone, the display will show you two arrows pointing at each other (the “hour glass” icon). Below is an example of a decompression dive at the ceiling zone.



TWO ARROWS POINT AT EACH OTHER “HOUR GLASS”: YOU ARE IN THE OPTIMUM CEILING ZONE AT 3 M. AND YOUR MINIMUM ASCENT TIME IS 8 MINUTES.



During the decompression stop, ASC TIME will count down towards zero. When the ceiling moves upwards, you can ascend to the new ceiling. You may surface only after the ASC TIME and CEILING labels have disappeared, which means that the decompression stop and any Mandatory Safety Stop have been completed. You are advised, however, to stay until the STOP sign has also disappeared. This indicates that the three minute Recommended Safety Stop has also been completed.

### Display above the ceiling

If you ascend above the ceiling during a decompression stop, a downward pointing arrow will appear and a continuous beeping starts.



DECOMPRESSION DIVE, ABOVE CEILING.  
NOTE DOWNWARD POINTING ARROW, ER WARNING  
AND ALARM. YOU SHOULD IMMEDIATELY (WITHIN  
3 MINUTES) DESCEND TO OR BELOW CEILING.

In addition, an Error warning (Er) reminds you that you have only three minutes to correct the situation. You must immediately descend to, or below, the ceiling.

If you continue to violate the decompression, the dive computer will go into a permanent Error Mode. In this mode, the instrument can only be used as a depth gauge and timer. You must not dive again for at least 48 hours. (See *Section 5.7. Error conditions*).

### 6.2. Diving in NITROX mode (DIVEean)

NITROX mode (DIVEean) is the second dive mode available in Suunto D6 and is used when using oxygen-enriched gas mixtures.

### 6.2.1. Before diving in NITROX mode

If set to the NITROX mode, the correct oxygen percentage of the gas in your cylinder must always be entered into the computer to ensure correct nitrogen and oxygen calculations. The dive computer adjusts its mathematical nitrogen and oxygen calculation models accordingly. The dive computer will not accept fractional percentage values of oxygen concentration. Do not round up fractional percentages. For example, 31.8% oxygen should be entered as 31%. Rounding up will cause nitrogen percentages to be understated and will affect decompression calculations. If you want to adjust the computer to provide more conservative calculations, use the personal adjustment feature to affect decompression calculations, or reduce the PO<sub>2</sub> setting to affect oxygen exposure according to the entered O<sub>2</sub>% and PO<sub>2</sub> values. Calculations based on nitrox use result in longer no-decompression times and shallower maximum depths than diving with air.

As a safety precaution, the oxygen calculations in the computer are made with an oxygen percentage of 1% + set O<sub>2</sub>% .

When the dive computer is set in NITROX mode, the Dive Planning mode calculates using the O<sub>2</sub>% and PO<sub>2</sub> values that are currently in the computer.

To set the nitrox mixes, refer to *Section 5.8.3. Setting the nitrox values.*

### Default nitrox settings

In NITROX mode, the Suunto D6 allows you to set 1 or 2 nitrox mixes containing 21-99% oxygen.

In the NITROX mode, the default setting for MIX1 is standard air (21% O<sub>2</sub>). It remains in this setting until the O<sub>2</sub>% is adjusted to any other percentage of oxygen (22% - 100%). The default setting for maximum oxygen partial pressure is 1.4 bar, however you are able to set it in the range of 0.5 - 1.6 bar.

MIX2 is set to OFF by default. To set MIX2, refer to *Section 6.2.4. Gas change and multiple breathing gas mixes*. Oxygen percentages and maximum oxygen partial pressures for MIX2 are stored permanently.

#### NOTE

*If MIX2 is set OFF, the computer will retain the manually entered values for the oxygen percentage and maximum oxygen partial pressure for MIX1 for about two hours, after which it will revert to the default settings. If MIX2 is set ON, the computer will retain the settings until changed.*

### 6.2.2. Oxygen displays


When NITROX mode is activated, the display will show the information in the figure below. In NITROX mode, the maximum operational depth is calculated based on set O<sub>2</sub>% and PO<sub>2</sub> values.




NITROX DIVE MODE ACTIVATION.  
MAXIMUM OPERATIONAL DEPTH BASED ON  
SET O<sub>2</sub>% (21%) AND PO<sub>2</sub> (1.4 BAR) IS 56.7 M.

If set to NITROX mode, the Suunto D6 will additionally show on the alternative display:

- the oxygen percentage, labeled O<sub>2</sub>%
- the set oxygen partial pressure limit, labeled PO<sub>2</sub>
- the current oxygen toxicity exposure, labeled OLF
- maximum depth
- current time
- water temperature
- dive time

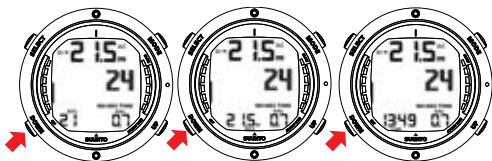

DOWN BUTTON  
TOGGLES BETWEEN  
O<sub>2</sub>, MAXIMUM DEPTH  
AND CURRENT TIME.

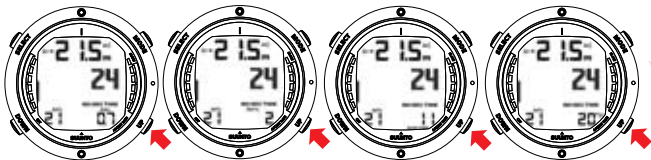

UP BUTTON  
TOGGLES  
BETWEEN PO<sub>2</sub>,  
OLF, DIVE TIME  
AND WATER  
TEMPERATURE.

### **6.2.3. Oxygen limit fraction (OLF)**

If set to NITROX mode, in addition to tracking the diver's exposure to nitrogen, the instrument tracks the exposure to oxygen. These calculations are treated as entirely separate functions.


The dive computer calculates separately for Central Nervous System oxygen toxicity (CNS) and Pulmonary Oxygen toxicity, the latter measured by the addition of Oxygen Toxicity Units (OTU). Both fractions are scaled so that the maximum tolerated exposure for each is expressed as 100%.

The Oxygen Limit Fraction (OLF) displays only the value of the higher of the two calculations. The oxygen toxicity calculations are based on the factors listed in Section 9.3 "Oxygen exposure".

### **6.2.4. Gas change and multiple breathing gas mixes**

One of Suunto D6's special features is the possibility to set an additional nitrox mix to be used during a dive. This feature can be activated by setting the MIX2 to ON and entering other parameters in the same way as with the primary gas. Mix 2 settings are held until you change them (they will not return to default settings automatically). A dive is always started with MIX1. During the dive, the Suunto D6 enables you change to another enabled mix, which is within the set maximum oxygen partial pressure. The tissue calculation during the dive is based on the mix you have selected.

The Suunto D6 allows gas changes to enabled gas mixes during the dive. Gas changes are made by following the procedure below:

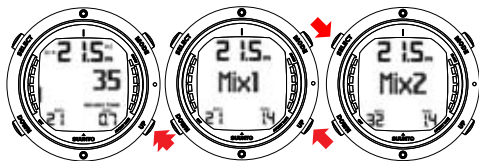

CHANGING GAS MIX. SCROLL THROUGH ENABLED MIXES BY PRESSING THE UP OR DOWN BUTTONS. SELECT NEW MIX BY PRESSING THE SELECT BUTTON.

#### NOTE

*Mix number, O<sub>2</sub>%, and PO<sub>2</sub> for the mixes are shown when scrolling. If the set PO<sub>2</sub> limit is exceeded, it will be shown with the PO<sub>2</sub> value blinking. The dive computer does not allow you to change to a gas whose set PO<sub>2</sub> is exceeded. In such a case, the mix is shown but cannot be selected.*


#### NOTE

*If no button is pressed in 15 seconds, the dive computer will go back to the dive display without changing the gas mix. Upon ascent, the computer prompts you to change gas when the PO<sub>2</sub> level you have set for the next mix allows a gas change. The prompt is an audible 3 beeps and the current O<sub>2</sub> mix starts to blink.*

### 6.3. Diving in GAUGE mode (DIVEgauge)

If set to GAUGE mode, the dive computer can be used as a bottom timer or as a freediving instrument.

In the GAUGE mode, the total dive time is always displayed in minutes in the lower right corner. In addition, a Dive Timer in the center window displays time in minutes and seconds. The center window Dive Timer is activated at the start of the dive and it can be reset during the dive and used as a stopwatch by pressing the SELECT button.

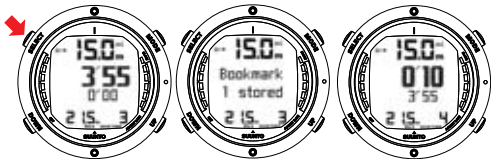

BY PRESSING THE SELECT BUTTON DURING A DIVE, A BOOKMARK IS WRITTEN IN THE PROFILE MEMORY, THE DIVE TIMER IS RESET, AND THE PREVIOUSLY-TIMED INTERVAL IS DISPLAYED BELOW.

- NOTE** *The GAUGE mode does not provide decompression information.*
- NOTE** *There is no ascent rate monitoring in the GAUGE mode.*
- NOTE** *If you dive with the GAUGE mode, it is not possible to change between the modes before the no fly time has counted down.*


## 7. AFTER DIVING

### 7.1. At the surface

Once back at the surface, Suunto D6 continues to provide post-dive safety information and alarms. Calculations to enable repetitive dive planning also help to maximize diver safety.

#### 7.1.1. Surface interval

An ascent to any depth shallower than 1.2 m/4 ft will cause the DIVING display to be replaced by the SURFACE display:

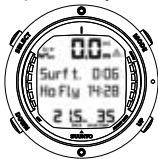

IT IS 6 MINUTES SINCE YOU SURFACED FROM A 35-MINUTE DIVE. THE MAXIMUM DEPTH WAS 21.5 M. THE PRESENT DEPTH IS 0.0 M. THE AIRPLANE SYMBOL AND NO-FLY VALUE INDICATE THAT YOU SHOULD NOT FLY FOR 14 HOURS, 28 MINUTES. THE DIVER ATTENTION SYMBOL INDICATES THAT YOU SHOULD PROLONG YOUR SURFACE INTERVAL TIME.

Or, in the alternative displays, the following information will be shown:

- maximum depth of last dive in meters/feet
- dive time of last dive in minutes, shown as DIVE TIME
- the current time, shown as TIME
- the current temperature in °C/°F

If set to NITROX mode, the following information will also be shown:

- the oxygen percentage labeled O<sub>2</sub>%






- the oxygen partial pressure labeled PO<sub>2</sub>
- the current oxygen toxicity exposure labeled OLF

### 7.1.2. Dive numbering

Several repetitive dives are considered to belong to the same repetitive dive series when the dive computer has not counted the no-fly time to zero. Within each series, the dives are given individual numbers. The first dive of the series will be numbered as DIVE 1, the second as DIVE 2, the third as DIVE 3, etc.

If you start a new dive with less than 5 minutes of surface interval time, the dive computer interprets this as a continuation of the previous dive and the dives are considered to be the same. The diving display will return, the dive number will remain unchanged, and the dive time will begin where it left off. After 5 minutes on the surface, subsequent dives are, by definition, repetitive. The dive counter displayed in the Planning mode will increment to the next number if another dive is made.

Table 7.1. Alarms

Symbol on display	Indication
	Diver Attention Symbol - Attenuated RGBM model set
	Diver Attention Symbol - Extend Surface Interval
	Violated Decompression Ceiling
	Do Not Fly Symbol

### 7.1.3. Repetitive dive planning

The Suunto D6 includes a dive planner that allows you to review the no-decompression limits on a subsequent dive, taking the residual nitrogen loading of previous dives into consideration. The Dive Planning mode is explained in *Section Dive Planning mode (MEMplan)* in *Section 7.1.5. MEMORY mode* .

### 7.1.4. Flying after diving

The no-fly time is shown in the center window next to the airplane image. Flying or traveling to a higher altitude should be avoided at any time when the computer is counting down the no-fly time.

The no-fly time is always at least 12 hours, or equivalent to the so-called desaturation time (if longer than 12 hours). For desaturation times lower than 70 minutes, no no-fly time is given.

In the Permanent Error mode and GAUGE mode the no-fly time is 48 hours.


The Divers Alert Network (DAN) recommends the following on no-fly times:

- A minimum surface interval of 12 hours would be required in order to be reasonably assured a diver will remain symptom free upon ascent to altitude in a commercial jetliner (altitude up to 2,400 m/8,000 ft)
- Divers who plan to make daily, multiple dives for several days, or make dives that require decompression stops, should take special precautions and wait for an extended interval beyond 12 hours before a flight. Further, the Undersea and Hyperbaric Medical Society (UHMS) suggests divers using standard air cylinders and exhibiting no symptoms of decompression illness wait 24 hours after their last dive to fly in an aircraft with cabin pressure up to 2,400 m/8,000 ft. The only two exceptions to this recommendation are:

- If a diver has less than 2 hours total accumulated dive time in the last 48 hours, a 12 hour surface interval before flying is recommended
- Following any dive that required a decompression stop, flying should be delayed for at least 24 hours, and if possible, for 48 hours
- Suunto recommends that flying is avoided until all the DAN and UHMS guidelines, as well as the dive computer's no-fly conditions, are satisfied

### 7.1.5. MEMORY mode

The memory options include a dive planner (MEMplan), dive logbook (MEMlog) and dive history (MEMhis). They are accessed from DIVE mode and you can toggle between them by using the UP/DOWN buttons.

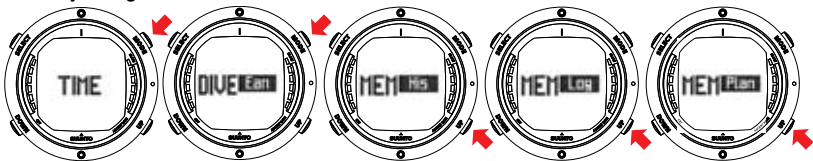


The dive time and date are registered in the Logbook memory. Always check before diving that the time and date are correctly set, especially after traveling between different time zones.

### Dive Planning mode (MEMplan)

The Dive Planning mode displays no-decompression times for a new dive, taking into account the effects of previous dives.

When entering the MEMplan mode, the display first briefly shows the remaining desaturation time before going into plan mode.

By pressing the UP/DOWN buttons, you can scroll the no-decompression limits in 3 m/10 ft increments ending at 45 m/150 ft. No-decompression limits longer than 99min are displayed as “—”.

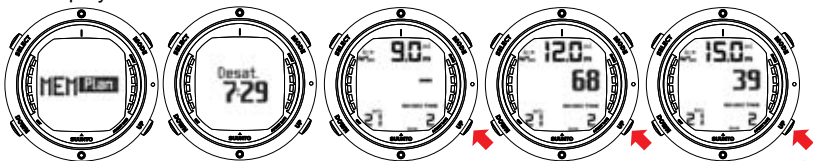

WHEN ENTERING THE MEMPLAN MODE THE DISPLAY FIRST BRIEFLY SHOWS THE REMAINING DESATURATION TIME BEFORE GOING INTO PLAN MODE. USE UP AND DOWN BUTTONS TO SCROLL DIFFERENT NO-DECOMPRESSION LIMITS. NO-DECOMPRESSION LIMITS LONGER THAN 99 MINUTES ARE DISPLAYED AS “—”.

The Planning mode takes into account the following information from previous dives:

- any calculated residual nitrogen
- all dive history for the past four days

The no-decompression times given for different depths will therefore be shorter than before your first “fresh” dive.

You can exit the planning mode by pressing the MODE button.

**NOTE**

*The Planning mode is disabled in GAUGE mode and in Error mode (see Section 5.7. Error conditions). The planning mode calculates no-decompression times for MIX1 only. If an additional mix is enabled in the NITROX mode, it does not affect the calculations in MEMplan mode.*

Higher Altitude and conservative Personal Adjustment settings will shorten the no-decompression time limits. These limits at different Altitude and Personal Adjustment setting selections are explained in *Section 5.9.4. Diving at altitude* and in *Section 5.9.5. Personal adjustments*

**Dive numbering shown during dive planning**


Dives belong to the same repetitive dive series if the instrument was still counting down the no-fly time at the beginning of the dive.

The surface interval must be at least 5 minutes for a dive to be considered a repetitive dive. Otherwise, it is considered a continuation of the same dive. The dive number will not change and the dive time will continue where it left off. (See also *Section 7.1.2. Dive numbering* ).

**Dive logbook (MEMlog)**

The Suunto D6 has a very sophisticated, high capacity Logbook and Profile Memory. The data is recorded in the profile memory based on the selected sample rate. Dives shorter than the recording interval are not registered (see *Section 5.8.5. Setting the sample rate*).

The END OF LOGS text is displayed between the oldest and most recent dive. The following information will be shown on three pages:

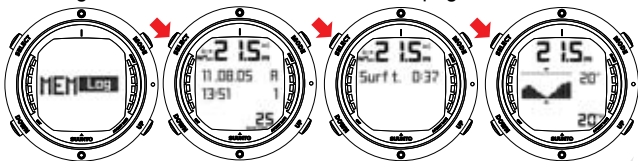

THERE ARE THREE PAGES OF LOGBOOK DIVE INFORMATION. USE SELECT BUTTON TO SCROLL BETWEEN LOGBOOK PAGES I, II, AND III. THE DATA OF THE MOST RECENT DIVE IS SHOWN FIRST.

#### Page I, main display

- Maximum depth (NOTE! Depending on the sampling rate, the reading may differ from the maximum depth reading of the Dive History up to 0.3 m/1 ft.)
- date of dive
- type of dive (Air, Ean, Gauge)
- dive start time
- dive number
- oxygen percentage for Mix1
- total dive time

#### Page II

- maximum depth

- surface time before previous dive
- warnings

### Page III

- depth/time profile of the dive
- real-time water temperature


The memory will retain approximately the last 36 hours of dive time. After that, when new dives are added, the oldest dives are deleted. The contents of the memory will remain when the battery is changed (providing that the battery has been replaced according to the instructions).

### NOTE

*Several repetitive dives are considered to belong to the same repetitive dive series if the no-fly time has not ended. See Section 7.1.2. Dive numbering for further information.*

### Dive history (MEMhis)

The Dive History is a summary of all the dives recorded by the dive computer. The following information will be shown on the display:

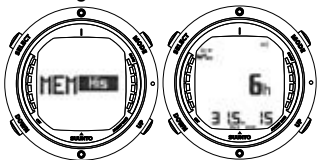

DIVE HISTORY DISPLAY.  
TOTAL NUMBER OF DIVES, DIVE  
HOURS AND MAXIMUM DEPTH.

The Dive History Memory can hold a maximum of 999 dives and 999 diving hours. When these maximum values are reached, the counters will start again from zero.

**NOTE**                    *The maximum depth can be reset to 0.0 m/0 ft using the PC-Interface unit and the downloadable Suunto Dive Manager software.*

### **7.1.6. Suunto Dive Manager (SDM)**

Suunto Dive Manager (SDM) is optional PC software that greatly enhances the functionality of your Suunto D6. With the SDM software, you can download dive data from your dive computer to your PC. You can then view and organize all the data recorded with your Suunto D6. You can also plan dives, print copies of your dive profiles and upload your dive logs to share with your friends at SuuntoSports.com.

You can always download the latest version of Suunto Dive Manager from [www.suunto.com](http://www.suunto.com) or [www.SuuntoSports.com](http://www.SuuntoSports.com). Please check for updates regularly as new features are constantly being developed.

The following data is transferred to your PC:

- depth profile of the dive
- dive time
- preceding surface interval time
- dive number
- dive start time (year, month, day and time)
- dive computer settings
- oxygen percentage settings and maximum OLF (in NITROX mode)
- tissue calculation data



- real-time water temperature
- additional dive information (e.g. SLOW and Mandatory Safety Stop violations, Diver Attention Symbol, Bookmark, Surfaced Mark, Decompression Stop Mark, Ceiling Error Mark, Gas Change)
- dive computer serial number
- personal information (30 characters)

Using SDM, you are able to enter setup options such as:

- input a personal, 30-character field into the Suunto D6
- reset the Dive History's maximum depth to zero

It is also possible to manually add comments, multimedia and other personal information to the PC-based dive data files.

### **7.1.7. SuuntoSports.com**

When you have dived and transferred your dive data to your Suunto Dive Manager, you can share your best experiences with other diving enthusiasts at SuuntoSports.com. It's a free and open Internet community where you can compare your underwater experiences with other Suunto users and learn from each other.

SuuntoSports.com includes three sections.

In My Suunto you can register your dive computer and manage your membership profile. The section also contains a personal event calendar.

The Communities section is meeting a place for smaller groups of SuuntoSports.com members. Here you can create and manage your own communities and search for others. All communities have a home page that lists the latest group activities. Community members can also use group-specific bulletin boards and calendars, create their own link lists and group activities. All registered SuuntoSports.com users automatically become members of the 'World of Suunto Sports' community.

The Sport forums include sport-specific news, bulletin boards, event calendars, ranking lists and discussions. You can also exchange experiences and read travel reports written by other members.

To learn more about SuuntoSports.com's functions and activities, visit the site, try them and, if necessary, use the site Help. The Help is available on the right side of the bar that divides the screen.

## 8. CARE AND MAINTENANCE

The Suunto D6 dive computer is a sophisticated precision instrument. Though designed to withstand the rigors of scuba diving, you must handle your Suunto D6 with care, and follow the advice below on how to maximize its service life.

### 8.1. Water contacts and buttons

Contamination or dirt on the water contacts/connector or buttons may prevent the automatic activation of the DIVE mode and cause problems during data transfer. Therefore, it is important that the water contacts and push buttons are kept clean. If the water contacts of the instrument are active (AC-text remains on the display) or the DIVE mode activates on its own, the reason is probably contamination or invisible marine growth that may create an unwanted electric current between the contacts. It is important that the dive computer is carefully washed in fresh water after the day's diving is completed. The contacts can be cleaned with fresh water and, if necessary, a mild detergent and a soft brush.

### 8.2. Care of your dive computer

- NEVER try to open the case of the dive computer
- Have your dive computer serviced every two years or after 200 dives (whichever comes first) by an authorized Suunto representative. This service will include a general operational check, replacement of the battery, and a water resistance check. The service requires special tools and training, so do not attempt to carry out any service that you are not competent to perform
- If moisture appears inside the case, have the instrument checked immediately by your Suunto representative

- If you detect scratches, cracks or other such flaws on the display that may impair its durability, have it replaced immediately by your Suunto representative
- Check the strap and the buckle for flaws. If needed, have them replaced by your Suunto representative
- Wash and rinse the unit in fresh water after every use
- Protect the unit from shock, extreme heat, direct sunlight, and chemical corrosion. The dive computer cannot withstand the impact of heavy objects like scuba cylinders, nor chemicals like gasoline, cleaning solvents, aerosol sprays, adhesive agents, paint, acetone, alcohol etc. Chemical reactions with such agents will damage seals, the case, and the finish
- Store your dive computer in a dry place when you are not using it
- The dive computer displays a battery symbol as a warning when the power gets too low. When this happens, the instrument should not be used until the battery has been replaced. Also refer to *Section 5.9. Activation and pre-checks*
- Do not fasten the strap of your dive computer too tightly. You should be able to insert your finger between the strap and your wrist

### **8.3. Maintenance**

If left without care for an extended period, a thin film, often invisible to the naked eye, will cover the unit. Much like the build-up on the glass of an aquarium, this film is the result of organic contaminants found in both salt and fresh water. Suntan oil, silicone spray and grease will speed up this process. As a result of this build-up, moisture will be trapped next to the water contacts and will prevent your Suunto D6 from operating properly.

The water contacts can be cleaned with a small brush (e.g. toothbrush).

**IMPORTANT:** Your Suunto D6 should be soaked, then thoroughly rinsed with fresh water and dried with a soft towel after each dive. Make sure that all salt crystals and sand particles have been flushed out. Check the display for possible moisture or water, and do not use the Suunto D6 if you detect any moisture or water inside.

**CAUTION**

- *Do not use compressed air to blow water off the unit.*
- *Do not use solvents or other cleaning fluids that might cause damage.*
- *Do not test or use the dive computer in pressurized air.*

#### **8.4. Water resistance inspection**

The water resistance of the unit must be checked after replacing the battery or after other service operations. The check requires special equipment and training.

You must frequently check the display for any sign of leaks. If you find moisture inside your dive computer, there is a leak. A leak must be corrected without delay, as moisture will seriously damage the unit, even beyond repair. Suunto does not take any responsibility for damage caused by moisture in the dive computer, if the instructions of this manual have not been carefully followed.

In the event of a leak, immediately take the dive computer to an authorized Suunto representative.

## 8.5. Battery replacement

**NOTE** *It is advisable to contact an authorized Suunto representative for battery replacement. It is imperative that the change is made in a proper manner to avoid any leakage of water into the battery compartment or computer.*

**CAUTION** *Defects caused by improper battery installation are not covered by the warranty.*

**CAUTION** *When the battery is changed, all nitrogen and oxygen uptake data is lost. Therefore, the no-fly time shown by the computer should have reached zero or you must wait for 48 hours, or preferably up to 100 hours, before you dive again.*

All history and profile data, as well as the altitude, personal, and alarm settings, will remain in the dive computer memory after the battery change. However, the clock time and time alarm setting are lost. In the NITROX Mode, the nitrox settings also revert back to default settings (MIX1 21 % O<sub>2</sub>, 1.4 bar PO<sub>2</sub>, MIX2 OFF).

## 9. TECHNICAL DATA

### 9.1. Technical specifications

#### Dimensions and weight:

- Diameter: 50.0 mm/1.97 in
- Thickness: 16.0 mm/0.61 in
- Weight: 113g/3.98 oz

#### Depth gauge:

- Temperature compensated pressure sensor
- Salt water calibrated, in fresh water the readings are about 3% smaller (calibrated in compliance with EN 13319)
- Maximum depth of operation: 100 m/328 ft (complying with EN 13319)
- Accuracy:  $\pm 1\%$  of full scale or better from 0 to 80 m/262 ft at 20°C/68°F (complying with EN 13319)
- Depth display range: 0 to 150 m/492 ft
- Resolution: 0.1 m from 0 to 100 m/1 ft from 0 to 328 ft

#### Temperature display:

- Resolution: 1°C/1.5°F
- Display range: -20 to +50°C/-9 to +122°F
- Accuracy:  $\pm 2^\circ\text{C}/\pm 3.6^\circ\text{F}$  within 20 minutes of temperature change

#### Calendar clock:

- Accuracy:  $\pm 25$  s/month (at 20°C/68°F)
- 12/24 h display

#### Other displays:

### **Displays only in NITROX mode:**

- Oxygen %: 21 - 99
- Oxygen partial pressure display: 0.2 - 3.0 bar, depending on the limit setting
- Oxygen Limit Fraction: 1 - 200% with 1% resolution

### **Logbook/dive profile memory:**

- Recording interval: 20 seconds adjustable (1, 10, 20, 30, 60s). Records the maximum depth and minimum temperature of each interval
- Memory capacity: approximately 36 hours of diving with 20 second recording interval
- Depth accuracy: 0.3 m/1 ft

### **Operating conditions:**

- Normal altitude range: 0 to 3,000 m/10,000 ft above sea level
- Operating temperature: 0°C to 40°C/32°F to 104°F
- Storage temperature: -20°C to +50°C/ -4°F to +122°F

It is recommended that the instrument be stored in a dry place at room temperature.

**NOTE**                      *Do not leave the dive computer in direct sunlight!*

### **Tissue calculation model:**

- Suunto Deep Stop RGBM algorithm (developed by Suunto and Bruce R. Wienke, BSc, MSc, PhD)
- 9 tissue compartments
- Tissue compartment halftimes: 2.5, 5, 10, 20, 40, 80, 120, 240 and 480 minutes (on gassing). The off gassing halftimes are slowed down



- Reduced gradient (variable) "M" values based on diving habit and dive violations. The "M" values are tracked up to 100 hours after a dive
- The EAN and oxygen exposure calculations are based on recommendations by R.W. Hamilton, PhD and currently accepted exposure time limit tables and principles

### **Battery:**

- One 3 V lithium battery: CR 2450
- Battery storage time (shelf life): Up to three years
- Replacement: Every three years, or more often depending on dive activity
- Life expectancy at 20°C/68°F:
  - 0 dives/y - 3 years
  - 100 dives/year – 2 years
  - 300 dives/year – 1.5 years

The following conditions have an effect on the expected battery lifetime:

- The length of the dives
- The conditions in which the unit is operated and stored (e.g. temperature/cold conditions). Below 10°C/50°F the expected battery lifetime is about 50-75% of that at 20°C/68°F
- The use of the backlight and audible alarms
- The use of the compass
- The quality of the battery. (Some lithium batteries may exhaust unexpectedly, which cannot be tested in advance)
- The time the dive computer has been stored until it gets to the customer. (The battery is installed in the unit at the factory)

## NOTE

*Low temperature or an internal oxidation of the battery may activate the battery warning even though the battery has enough capacity. In this case, the warning usually disappears when the DIVE mode is activated again.*

## 9.2. RGBM

The Suunto Reduced Gradient Bubble Model (RGBM) is a modern algorithm for predicting both dissolved and free gas in the tissues and blood of divers. It was developed in co-operation between Suunto and Bruce R. Wienke BSc, MSc, PhD. It is based on both laboratory experiments and diving data, including data from DAN.

It is a significant advance on the classical Haldane models, which do not predict free gas (microbubbles). The advantage of Suunto RGBM is additional safety through its ability to adapt to a wide variety of situations. Suunto RGBM addresses a number of diving circumstances outside the range of dissolved-gas-only models by:

- Monitoring continuous multiday diving
- Computing closely spaced repetitive diving
- Reacting to a dive deeper than the previous dive
- Adapting to rapid ascents which produce high microbubble (silent-bubble) build-up
- Incorporating consistency with real physical laws for gas kinetics

### 9.2.1. Suunto RGBM adaptive decompression

The Suunto RGBM algorithm adapts its predictions of both the effects of microbubble build-up and adverse dive profiles in the current dive series. It also changes these calculations according to the personal adjustment you select.

The pattern and speed of decompression at the surface is adjusted according to microbubble influence.

On repetitive dives, adjustment may also be applied to the maximum allowable nitrogen overpressure in each theoretical tissue group.

Depending on the circumstances, Suunto RGBM will adapt the decompression obligations by doing any or all of the following:

- Reducing No-decompression Stop dive times
- Adding Mandatory Safety Stops
- Increasing Decompression Stop times
- Advising an extended surface interval (Diver Attention symbol)

#### **Diver Attention Symbol – Advice to Extend Surface Interval.**

Some patterns of diving cumulatively add a higher risk of DCI; for example, dives with short surface intervals, repetitive dives deeper than earlier ones, multiple ascents, and substantial multiday diving. When this is detected, in addition to adapting the decompression algorithm, the Suunto RGBM model will in some circumstances also advise, with the Diver Attention Symbol, that you extend your surface interval.

### 9.2.2. No-decompression limits

The no-decompression limits displayed by the dive computer for the first dive to a single depth (see *Table 9.1, No-decompression time limits for various depths (m)* and *Table 9.2, No-decompression time limits for various depths (ft)* .), are slightly more conservative than those permitted by the U.S. Navy tables.

Table 9.1. No-decompression time limits for various depths (m)

	<b>No-decompression time limits (mins) for various depths (m) for the first dive of a series</b>								
<b>Depth (m)</b>	<b>Personal Mode / Altitude Mode</b>								
	<b>P0/A0</b>	<b>P0/A1</b>	<b>P0/A2</b>	<b>P1/A0</b>	<b>P1/A1</b>	<b>P1/A2</b>	<b>P2/A0</b>	<b>P2/A1</b>	<b>P2/A2</b>
9	--	163	130	163	130	96	130	96	75
12	124	89	67	89	67	54	67	54	45
15	72	57	43	57	43	35	43	35	29
18	52	39	30	39	30	5	30	25	21
21	37	29	23	29	23	20	23	20	15
24	29	24	19	24	19	16	19	16	12
27	23	18	15	18	15	12	15	12	9
30	18	14	12	14	12	9	12	9	7
33	13	11	9	11	9	8	9	8	6

	<b>No-decompression time limits (mins) for various depths (m) for the first dive of a series</b>								
<b>Depth (m)</b>	<b>Personal Mode / Altitude Mode</b>								
	<b>P0/A0</b>	<b>P0/A1</b>	<b>P0/A2</b>	<b>P1/A0</b>	<b>P1/A1</b>	<b>P1/A2</b>	<b>P2/A0</b>	<b>P2/A1</b>	<b>P2/A2</b>
36	11	9	8	9	8	6	8	6	5
39	9	7	6	7	6	5	6	5	4
42	7	6	5	6	5	4	5	4	4
45	6	5	5	5	5	4	5	4	3

Table 9.2. No-decompression time limits for various depths (ft)

	<b>No-decompression time limits (mins) for various depths (ft) for the first dive of a series</b>								
<b>Depth (ft)</b>	<b>Personal Mode / Altitude Mode</b>								
	<b>P0/A0</b>	<b>P0/A1</b>	<b>P0/A2</b>	<b>P1/A0</b>	<b>P1/A1</b>	<b>P1/A2</b>	<b>P2/A0</b>	<b>P2/A1</b>	<b>P2/A2</b>
30	--	160	127	160	127	92	127	92	73
40	120	86	65	86	65	52	65	52	43
50	69	56	41	56	41	34	41	34	28
60	50	38	29	38	29	25	29	25	20
70	36	29	22	29	22	20	22	20	15
80	28	23	19	23	19	15	19	15	11

	<b>No-decompression time limits (mins) for various depths (ft) for the first dive of a series</b>								
<b>Depth (ft)</b>	<b>Personal Mode / Altitude Mode</b>								
	<b>P0/A0</b>	<b>P0/A1</b>	<b>P0/A2</b>	<b>P1/A0</b>	<b>P1/A1</b>	<b>P1/A2</b>	<b>P2/A0</b>	<b>P2/A1</b>	<b>P2/A2</b>
90	22	18	15	18	15	11	15	11	9
100	17	14	11	14	11	9	11	9	7
110	13	11	9	11	9	7	9	7	6
120	10	9	8	9	8	6	8	6	5
130	9	7	6	7	6	5	6	5	4
140	7	6	5	6	5	4	5	4	4
150	6	5	4	5	4	4	4	4	3

### 9.2.3. Altitude diving

The atmospheric pressure is lower at high altitudes than at sea level. After traveling to a higher altitude, you will have additional nitrogen in your body, compared to the equilibrium situation at the original altitude. This "additional" nitrogen is released gradually over time and equilibrium is restored. It is recommended that you acclimatize to a new altitude by waiting at least three hours before making a dive.

Before high-altitude diving, the instrument must be set to the Altitude Adjustment mode to adjust the calculations for the new altitude. The maximum partial pressures of nitrogen allowed by the mathematical model of the dive computer are reduced according to the lower ambient pressure.

As a result, the allowed no-decompression-stop limits are considerably reduced.

### 9.3. Oxygen exposure

The oxygen exposure calculations are based on currently accepted exposure time limit tables and principles. In addition to this, the dive computer uses several methods to conservatively estimate the oxygen exposure. For example:

- the displayed oxygen exposure calculations are raised to the next higher percentage value
- for recreational scuba diving, the recommended upper limit of 1.4 bar  $PO_2$  is used as a default
- the CNS % limits up to 1.6 bar are based on 1991 NOAA Diving Manual limits
- the OTU monitoring is based on the long-term daily tolerance level and the recovery rate is reduced

Oxygen related information displayed by the dive computer is also designed to ensure that all warnings and displays occur at the appropriate phases of a dive. For example, the following information will be shown before and during a dive when the computer is set in NITROX mode:

- the selected  $O_2\%$  on the alternative display
- OLF% alternative display for either CNS% or OTU% (whichever is larger)
- audible alarms are given and the OLF value starts to blink when the 80% and 100% limits are exceeded
- audible alarms are given and the actual  $PO_2$  value blinks when it exceeds the preset limit
- in dive planning, the maximum depth according to the  $O_2\%$  and maximum  $PO_2$  selected

## **10. INTELLECTUAL PROPERTY**

### **10.1. Copyright**

This user's manual is copyrighted and all rights are reserved. It may not, in whole or in part, be copied, photocopied, reproduced, or translated to any media without prior written consent from Suunto.

### **10.2. Trademark**

Suunto, D6, Consumed Bottom Time (CBT), Oxygen Limit Fraction (OLF), Suunto Reduced Gradient Bubble Model (RGBM), and Continuous Decompression and their logos are all registered or unregistered trademarks of Suunto. All rights are reserved.

### **10.3. Patent notice**

This product is protected by the following patents and patent applications: US 5,845,235 and US11/152,075. Other patents have been applied for.



## **11. DISCLAIMERS**

### **11.1. User's responsibility**

This instrument is intended for recreational use only. Suunto D6 must not be used for obtaining measurements that require professional or industrial precision.

### **11.2. Limits of liability and ISO 9001 compliance**

Suunto Oy does not assume any responsibility for losses or claims by third parties, which may arise through the use of this device.

Due to continuous product development, the Suunto D6 is subject to change without notice.

#### **ISO 9001**

Suunto Oy's Quality Assurance System is certified by Det Norske Veritas to be in accordance with ISO 9001 in all Suunto Oy's operations (Quality Certificate No. 96-HEL-AQ-220).

### **11.3. After sales service**

If a claim under warranty appears to be necessary, return the product, freight prepaid, to your Suunto representative, who is responsible for having your product repaired or replaced. Depending on the requirements in your country, include your name, address, proof of purchase and/or Warranty card, which can be found at the back of this manual. The claim will be honored and the product repaired or replaced at no charge and returned in what your Suunto representative determines a reasonable amount of time, provided that all necessary parts are in stock. All repairs that are not covered under the terms of this warranty will be made at the owner's expense. This warranty is non-transferable from the original owner.

You can locate your local Suunto representative at [www.suunto.com](http://www.suunto.com).

## 12. WARRANTY

### NOTE

*Warranty arrangements vary from country to country. The dive computer packaging contains information regarding the warranty benefits and requirements applicable to your purchase.*

This Suunto dive computer is warranted against defects in workmanship and materials for a period of two years after purchase to the original owner subject to and in accordance with the terms and conditions set forth below:

The dive computer should be serviced and repaired only by an authorized Suunto representative.

This warranty does not cover damage to the product resulting from improper usage, improper maintenance, neglect of care, alteration or unauthorized repair. This warranty will automatically become void if proper preventive maintenance procedures have not been followed as outlined in the use and care instructions for this product.

All implied warranties, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, are limited from the date of purchase and in scope to the warranties expressed herein. Suunto shall not be liable for loss of use of the product or other incidental or consequential costs, expenses or damage incurred by the purchase. All warranties not stated herein are expressly disclaimed.

Some states do not allow the exclusion or limitation of implied warranties of consequential damages, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

This warranty does not cover any representation or warranty made by representatives beyond the provisions of this warranty. No Suunto representative is authorized to make any modifications to this warranty or to make any additional warranty.

Battery replacement is not covered by this warranty.

This User's Guide should be kept with your dive computer.

Suunto's dive computers and wristop computers can be registered online at [www.suunto.com](http://www.suunto.com). Registering your unit makes it quicker and easier for us to help you if you ever need to send your product for servicing, or if you need information about using your unit from our Global Help Desk.

### 13. DISPOSAL OF THE DEVICE

Please dispose of the device in an appropriate way, treating it as electronic waste. Do not throw it in the garbage. If you wish, you may return the device to your nearest Suunto representative.



# GLOSSARY

Altitude dive	A dive made at an elevation greater than 300 m/1000 ft above sea level.
Ascent rate	The speed at which the diver ascends toward the surface.
ASC RATE	Abbreviation for ascent rate.
Ascent time	The minimum amount of time needed to reach the surface on a decompression stop dive.
ASC TIME	Abbreviation for ascent time.
Ceiling	On a decompression stop dive, the shallowest depth to which a diver may ascend based on computed nitrogen load.
CNS	Abbreviation for central nervous system toxicity.
Central nervous system toxicity	Toxicity caused by oxygen. Can cause a variety of neurological symptoms. The most important of which is an epileptic-like convulsion which can cause a diver to drown.
CNS%	Central nervous system toxicity limit fraction. Also note Oxygen Limit Fraction
Compartment	See "Tissue group".
DAN	Abbreviation for Divers Alert Network.
DCI	Abbreviation for decompression illness.
Decompression	Time spent at a decompression stop, or range, before surfacing, to allow absorbed nitrogen to escape naturally from tissues
Decompression range	On a decompression stop dive, the depth range between the floor and the ceiling within which a diver must stop for some time during ascent.

Decompression illness	Any of a variety of maladies resulting either directly or indirectly from the formation of nitrogen bubbles in tissues or body fluids, as a result of inadequately controlled decompression. Commonly called "the bends" or "DCI".
Dive series	A group of repetitive dives between which the dive computer indicates some nitrogen loading is present. When nitrogen loading reaches zero the dive computer deactivates.
Dive time	Elapsed time between leaving the surface to descend, and returning to the surface at the end of a dive.
EAD	Abbreviation for equivalent air depth.
EAN	Abbreviation for enriched air nitrox.
Enriched air nitrox	Also called nitrox or Enriched Air = EANx. Air that has some oxygen added. Standard mixes are EAN32 (NOAA Nitrox I = NN I) and EAN36 (NOAA Nitrox II = NN II).
Equivalent air depth	Nitrogen partial pressure equivalent table.
Floor	The deepest depth during a decompression stop dive at which decompression takes place.
Half time	After a change in ambient pressure, the amount of time required for the partial pressure of nitrogen in a theoretical compartment to go half way from its previous value to saturation at the new ambient pressure.
Multi level dive	A single or repetitive dive that includes time spent at various depths and whose no decompression limits are therefore not determined solely by the maximum depth attained.

Nitrox	In sports diving, refers to any mix with a higher fraction of oxygen than standard air.
NOAA	United States National Oceanic and Atmospheric Administration.
No decompression time	The maximum amount of time a diver may remain at a particular depth without having to make decompression stops during the subsequent ascent.
No decompression dive	Any dive which permits a direct, uninterrupted ascent to the surface at any time.
NO DEC TIME	Abbreviation for no decompression time limit.
OEA = EAN = EANx	Abbreviations for oxygen enriched air nitrox.
OLF	Abbreviation for oxygen limit fraction.
OTU	Abbreviation for oxygen tolerance unit.
Oxygen tolerance unit	Used to measure the whole-body-toxicity.
Oxygen limit fraction	A term used by Suunto for the values displayed in the oxygen toxicity bargraph. The value is either the CNS% or the OTU%.
O <sub>2</sub> %	Oxygen percentage or oxygen fraction in the breathing gas. Standard air has 21% oxygen.
Oxygen partial pressure	Limits the maximum depth to which the nitrox mixture can be safely used. The maximum partial pressure limit for enriched air diving is 1.4 bar. The contingency partial pressure limit is 1.6 bar. Dives beyond this limit risk immediate oxygen toxicity.
PO <sub>2</sub>	Abbreviation for oxygen partial pressure.
RGBM	Abbreviation for Reduced Gradient Bubble Model.



Reduced Gradient Bubble Model	Modern algorithm for tracking both dissolved and free gas in divers.
Repetitive dive	Any dive whose decompression time limits are affected by residual nitrogen absorbed during previous dives.
Residual nitrogen	The amount of excess nitrogen remaining in a diver after one or more dives.
SURF TIME	Abbreviation for surface interval time.
Surface interval time	Elapsed time between surfacing from a dive and beginning a descent for the subsequent repetitive dive.
Tissue group	Theoretical concept used to model bodily tissues for the construction of decompression tables or calculations.
Whole-body toxicity	Another form of oxygen toxicity, which is caused by prolonged exposure to high oxygen partial pressures. The most common symptoms are irritation in the lungs, a burning sensation in the chest, coughing and reduction of the vital capacity. Also called Pulmonary Oxygen Toxicity. See also OTU.

# ▲ SUUNTO

## TWO YEAR WARRANTY

**This product is warranted to be free of defects in material and/or workmanship to the original owner for the above noted period (does not include battery life). Keep a copy of the original purchase receipt and make sure to get this warranty card stamped at the place of purchase. The warranty originates from the date of purchase.**

**All warranties are limited and are subject to the restrictions given in the instruction manual. This warranty does not cover the damage to the product resulting from improper usage, improper maintenance, neglect of care, alteration, improper battery replacement or unauthorized repair.**

**Suunto's dive computers and wristop computers can be registered online at [www.suunto.com](http://www.suunto.com).**

Model of  
Wristop computer:

Serial  
number:

_____	_ _ _ _ _ _ _ _ _
_____	_ _ _ _ _ _ _ _ _
_____	_ _ _ _ _ _ _ _ _
_____	_ _ _ _ _ _ _ _ _

Date of purchase\_\_\_\_\_

Place of purchase/Store name\_\_\_\_\_

Store City\_\_\_\_\_ Store Country\_\_\_\_\_

Store stamp with date of purchase

--

Name\_\_\_\_\_

Address\_\_\_\_\_

City\_\_\_\_\_ Country\_\_\_\_\_

Telephone\_\_\_\_\_ E-mail\_\_\_\_\_

Signature

_____
-------

## COPYRIGHT

This publication and its contents are proprietary to Suunto Oy.

Suunto, Wristop Computer, Suunto D6, Replacing Luck and their logos are registered or unregistered trademarks of Suunto Oy. All rights reserved.

While we have taken great care to ensure that information contained in this documentation is both comprehensive and accurate, no warranty of accuracy is expressed or implied. Its content is subject to change at any time without notice.

[www.suunto.com](http://www.suunto.com)

© Suunto Oy 11/2005, 3/2006